


68-447 R and R rear roof frame paneling


Removal

1 Remove paneling on rear pillar (68-449).

2 Unscrew screw at left and right on paneling.

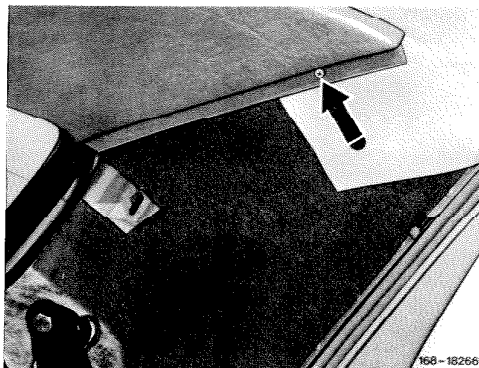


3 Push back holding spring of dome light through recess by means of a screwdriver and pull out dome light in downward direction, then separate cable connections and put light aside.

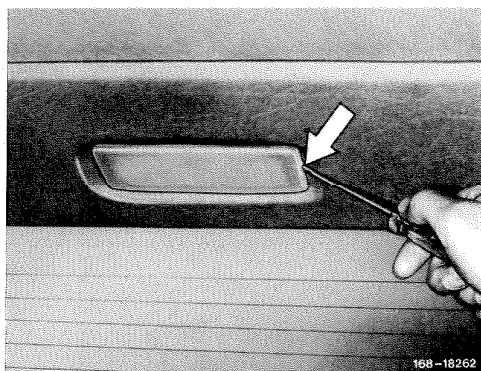

4 Unscrew screw in cutout of dome light.


5 Pull out paneling in forward direction.

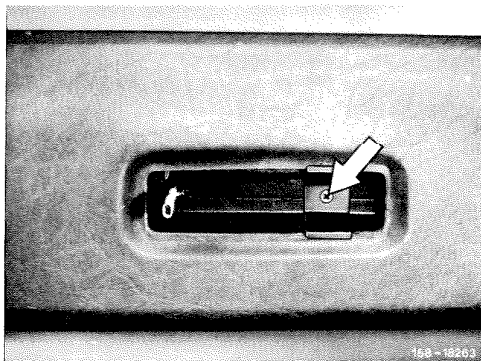

68-447 R and R rear roof frame paneling

Installation

- 6 Attach paneling to roof frame from the front.
- 7 For further installation proceed vice versa.

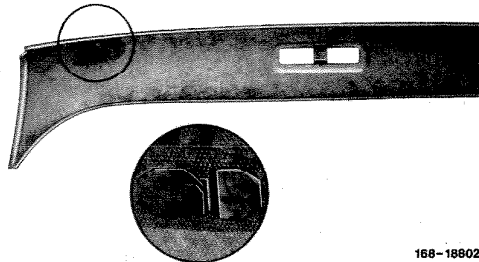

168-18802