



68-470 R and R B-pillar molding

Removal

- 1 Push cap in downward direction and unscrew screw on side member.
- 2 Unscrew screw below on cover.
- 3 Pull cover out of paneling on center pillar in downward direction.

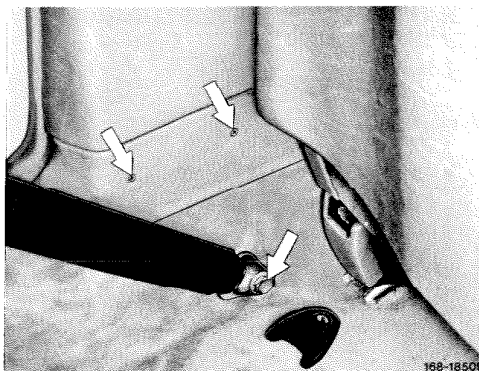

- 4 Pull paneling from center pillar in downward direction.
- 5 Pull belt strap with lock tongue through opening on paneling.

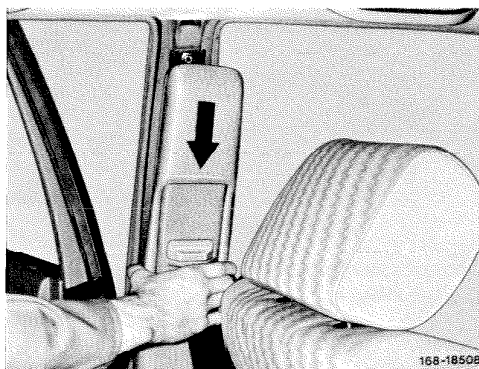

Installation

- 6 For installation proceed vice versa.

Caution!

In order to avoid damage to the seat belts, always ensure after the installation of the cover that the upper belt return fitting can be moved freely. Correct the installation position of interfering covers or linings.