



Removal

1 Remove partition between tank and trunk (68-700).


2 Remove clips on rear center section.

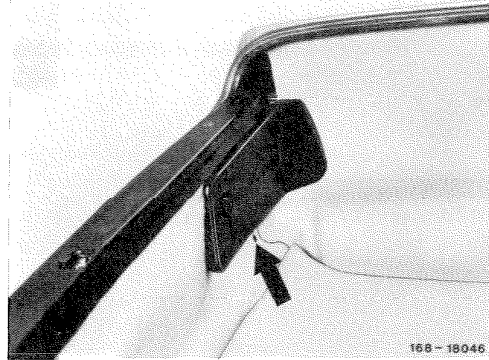

3 Pull clip out of rear pillar.

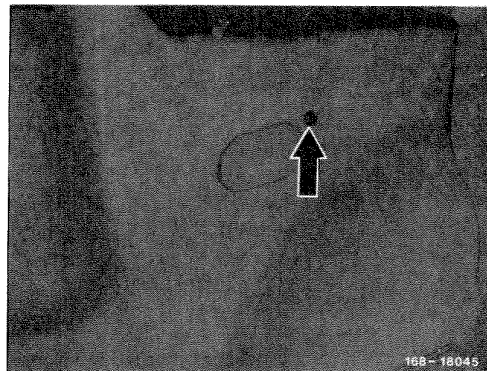


4 Turn fastening bolts for lamp carrier to the left, remove lamp carrier and put aside in trunk.

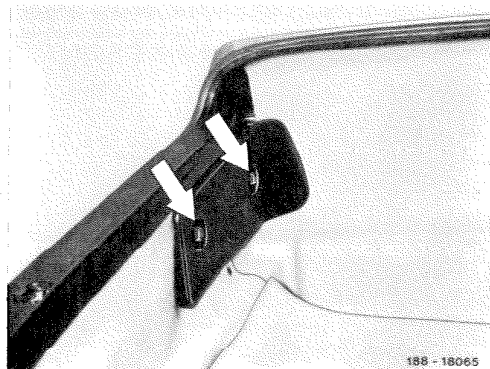

68-480 R and R trunk liner

- 5 Remove cover at top on trunk lid cutout.
- 6 Swivel cover inwards into trunk and remove.

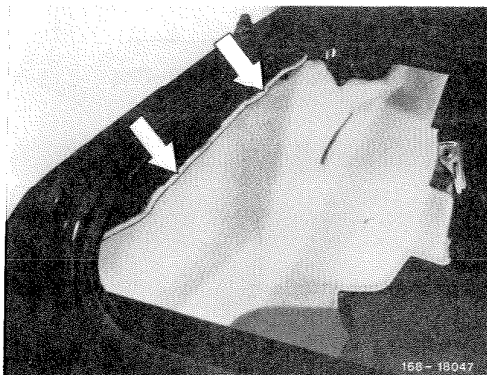

Installation

- 7 For installation proceed vice versa.