



68-700 R and R fuel tank trunk panel

Removal

- 1 Unscrew the three fastening screws at top on rear wall.
- 2 Remove needle felt carpet from trunk floor.

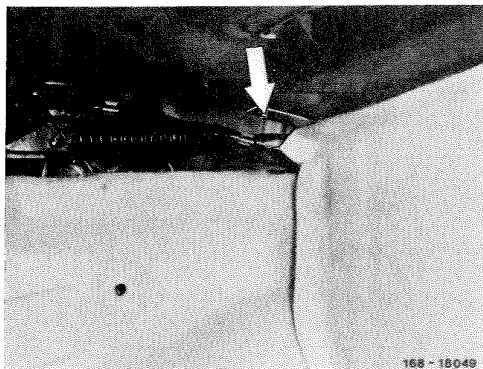

- 3 Unscrew the three fastening screws at bottom on trunk floor and remove partition.

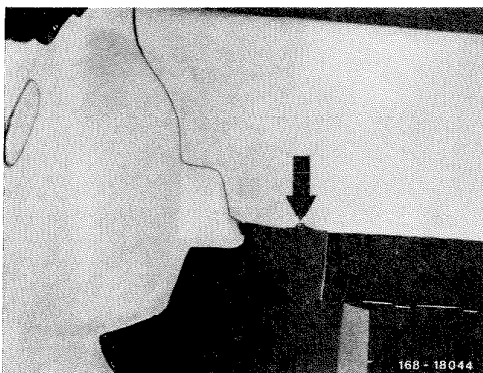

Installation

Note: Prior to installing partition, make sure that the two foam-fabric inlays on fuel tank are glued-on.

- 4 For further installation proceed vice versa.

