


72-103 R and R door inner trim panel

Note


This chapter describes the disassembly and assembly of door lining on coupe. The door linings on sedan are disassembled and assembled analogously.

Disassembly


- 1 Place removed door lining on suitable support.
- 2 Unscrew fastening nuts of wooden trimstrip on recess of inner door handle and remove wooden trimstrip.

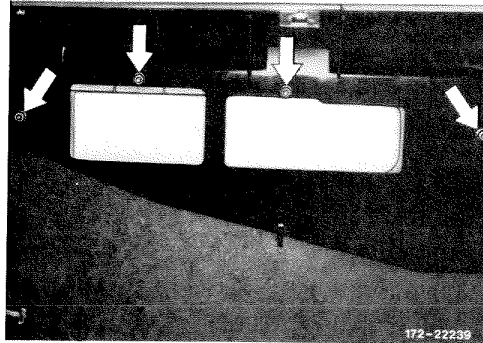

- 3 Push out front clamp in cutout of door lining center.

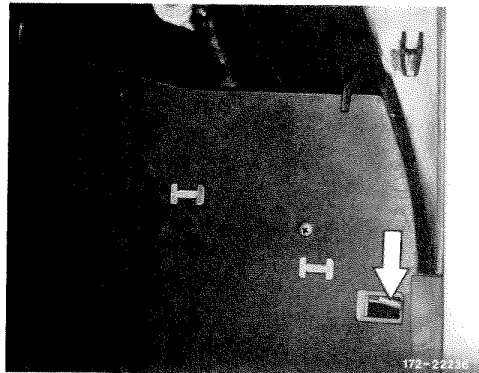


- 4 Push out the two lower clamps on door lining rear and disconnect door bag at bottom.

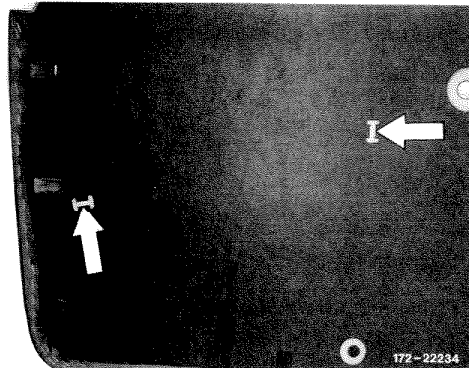


72-103 R and R door inner trim panel

5 Unscrew fastening screw on door lining at front and push off the two clamps.

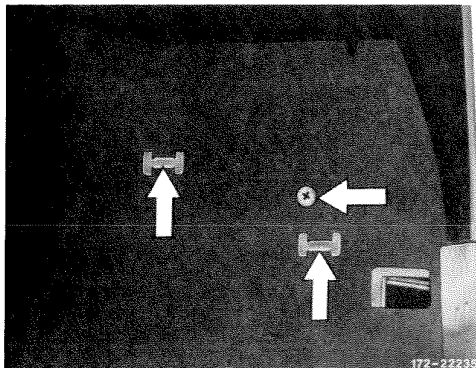


6 Unscrew fastening screw on door lining rear and push off clamp.

7 Remove door lining center from door lining top.

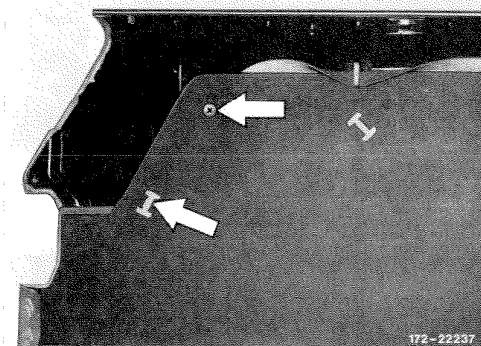

8 Unbend holding clips of trimstrip on door lining top and remove trimstrip. Push out bushing of locking button.

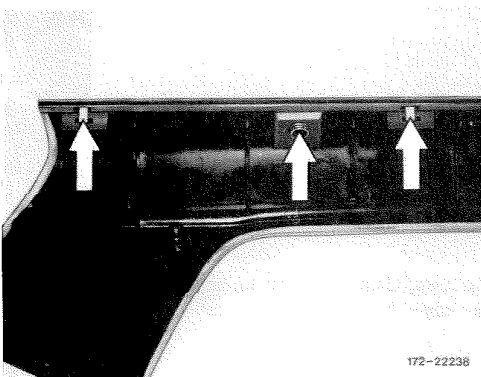

Assembly

9 For assembly proceed vice versa.