

## 72-198 R and R flexible window run channel


---

### Removal

---

1 Remove crank window (72-190 or 72-191).

2 Pull window run channel out of window frame.

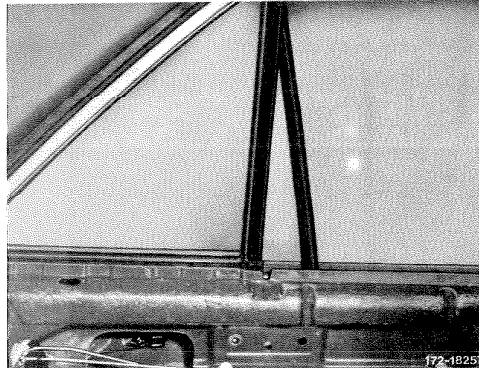

### Installation

---

3 For installation proceed vice versa.