


## 72-200 R and R guide holder with guide rail (coupe)

---


### Removal

---


- 1 Remove door lining (72-100).
- 2 Pull sealing sheet from inner door panel.
- 3 Force off fastening clips of sealing frame.

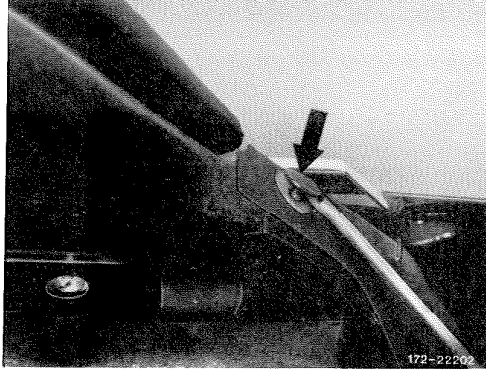

- 4 Unscrew both screws on guide holder.

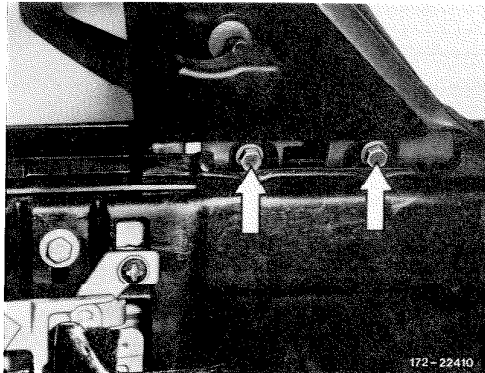


- 5 Unscrew nut on front guide rail.
- 6 Close crank window.
- 7 Force guide holder below out of bearing bracket and unscrew counternuts from threaded bolt.
- 8 Open crank window.

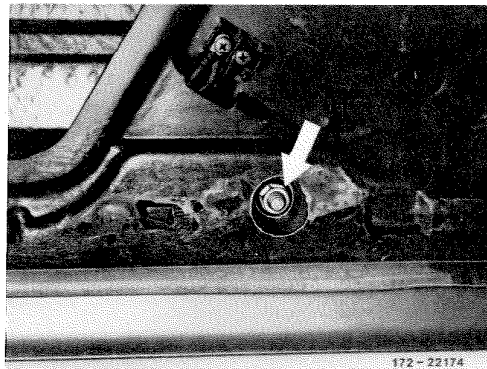

## 72-200 R and R guide holder with guide rail (coupe)

---

9 Pull guide rail out of door shaft in upward direction. To permit removal of threaded bolt, tilt guide holder to the rear.

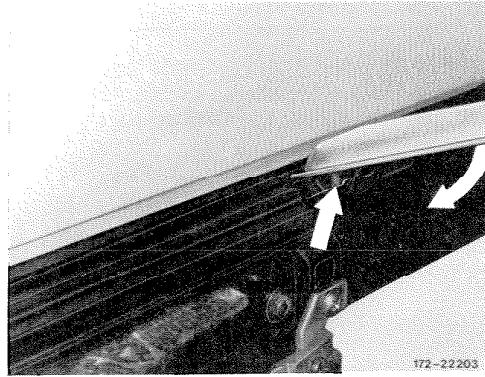

### Installation

---

10 For installation proceed vice versa.