


## 72-220 R and R door sealing frame

---


### Removal

---

- 1 Remove bolt on door holder.

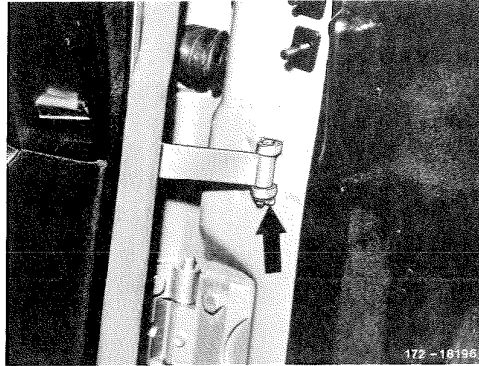

- 2 Separate clip heads on front side of door by means of a chisel and remove holding rail.
- 3 Pull-off sealing frame.
- 4 Pull out clip stub at front side of door with pliers.

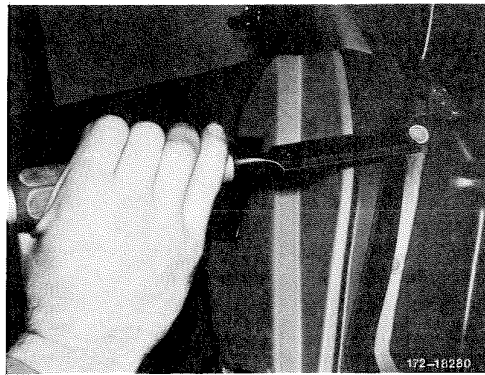

### Installation

---

- 5 For installation proceed vice versa.

**Note:** In range of holding rail on front side of door, glue sealing frame to inner door panel with MB universal glue, part no. 000 989 92 71.