


72-230 R and R front door inside handle


A. Sedan

Removal

- 1 Remove door lining (72-100).
- 2 Pull-off sealing sheet in upper range.
- 3 Unscrew screws on inside actuation.

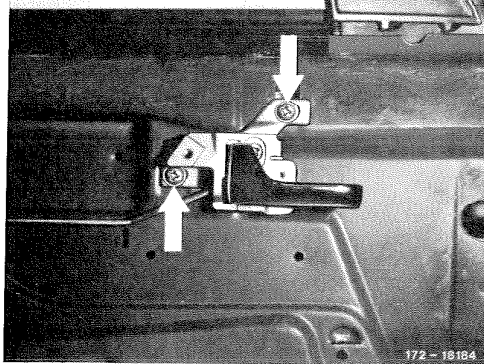

- 4 Turn inside actuation around pullrod toward the rear and disconnect pullrod.
- 5 Unclip pullrod on inside door panel.
- 6 Disconnect pullrod on door lock.

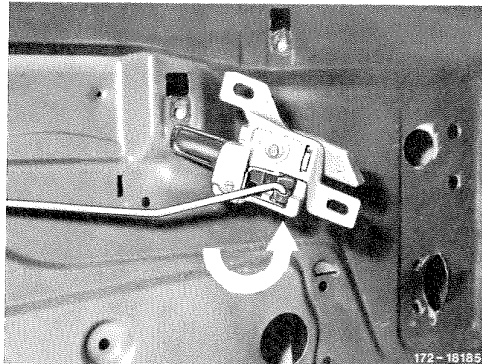


Installation

- 7 For installation proceed vice versa.


Attention!

Set linkage of inside actuation free of play.

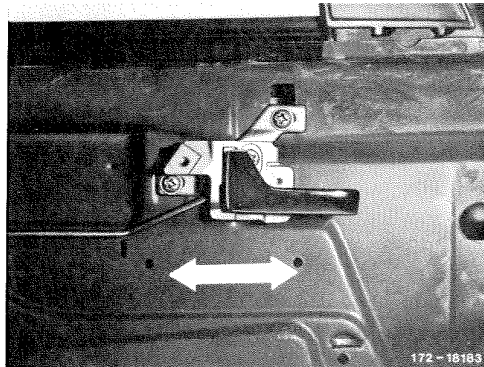

72-230 R and R front door inside handle


Note: By loosening the two fastening screws, the inside actuation can be adjusted in height. This is necessary if the cover of the wooden lining is not properly seated.

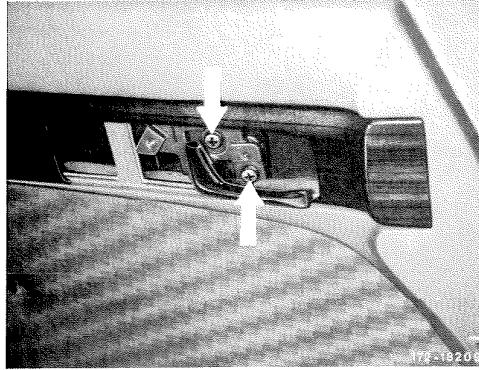


B. Coupe

Removal

- 1 Remove door lining (72-100, section B).
- 2 Pull off sealing sheets on inner door panel in upper range.
- 3 Remove screws on inner actuation.
- 4 Turn inner actuation around pull rod toward the rear and disconnect pull rod.

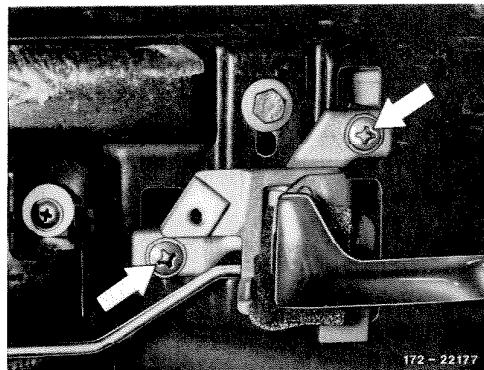


- 5 Push back lock on guide piece of actuating control, slide guide piece toward the rear and disconnect.

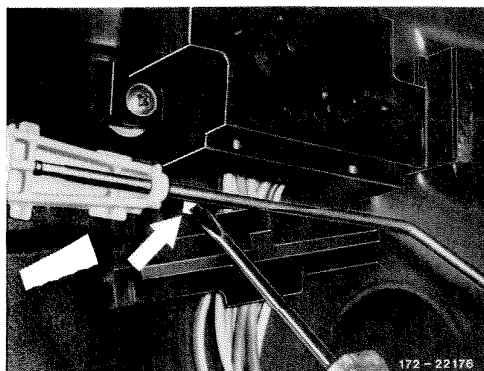


72-230 R and R front door inside handle

- 6 Disconnect actuating control from guide brackets on inner door panel.

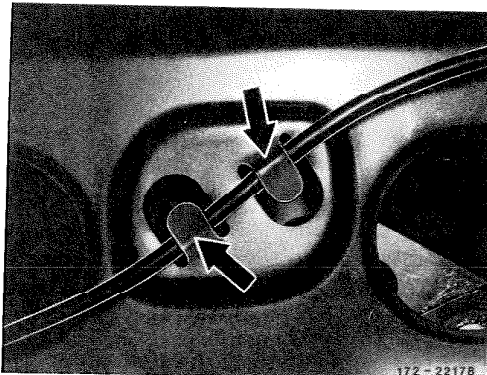

- 7 Pull actuating control forward and disconnect at door lock.

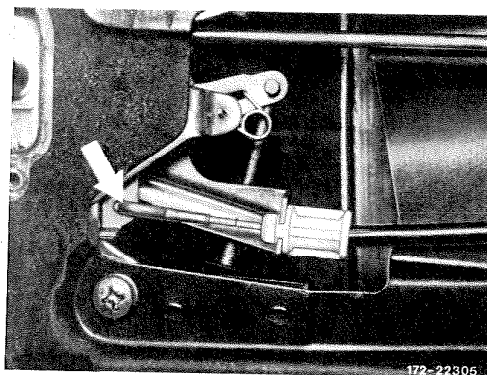

Installation

- 8 For installation proceed vice versa.

Note: Adjust actuating control free of play by displacing inside actuating member.