



72-241 R and R rear door outside handle

Removal

- 1 Push out closing cap and unscrew screw underneath.

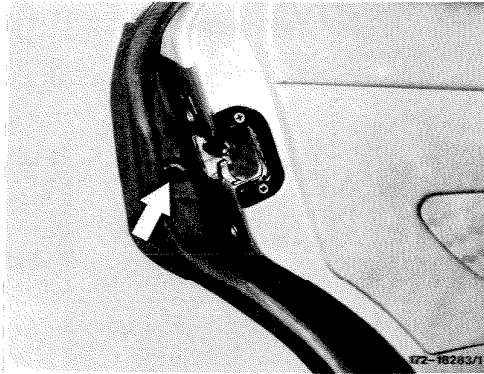


- 2 Knock door handle forward by a blow with ball of thumb or, if required, with a suitable piece of wood and a hammer and remove.

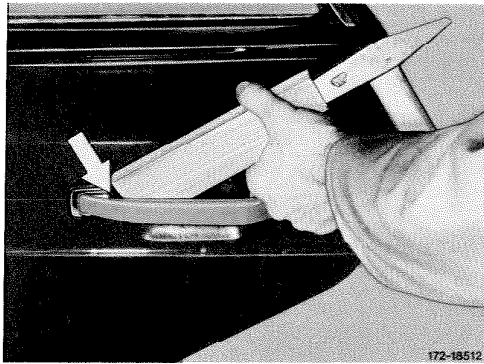

Installation

- 3 Turn front fastening screw into door handle approximately up to sheet thickness of outside door panel.
- 4 Introduce door handle at front fastening point.
- 5 Introduce door handle at the rear.

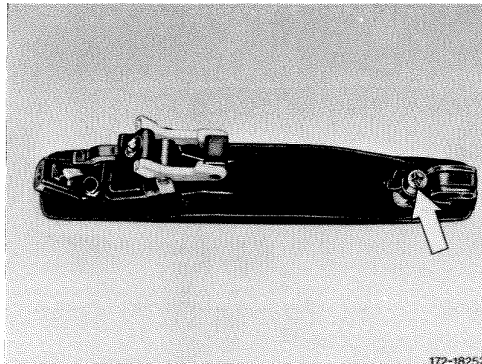

72-241 R and R rear door outside handle

6 Push door handle to the rear. If the preload between outside door panel and front fastening screw is not enough, adjust screw accordingly.

7 Tighten door handle and push-in lock washer.

Note: The clearance between the drive bolt and counterpiece on door lock should amount to approx. 1 mm. Adjustments are made on slotted screw (arrow).

