

72-250 R and R front door latch


A. Sedan

Removal

- 1 Remove inside door actuation (72-230).
- 2 Remove outside door handle (72-240).
- 3 Unscrew screws on door lock.



- 4 Swivel door lock with cover at the top around window run channel and remove from door in downward direction.

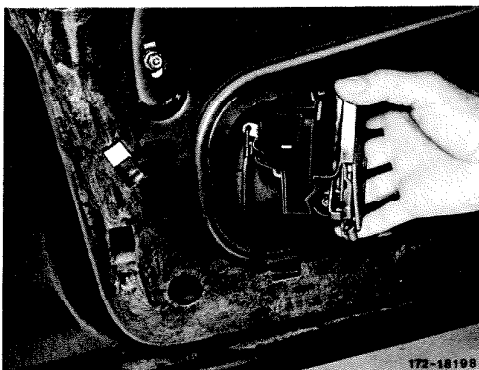

Installation

- 5 Screw-on the two visible fastening screws on face first and then the screws on inside door panel and tighten to 8 Nm.
- 6 For further installation proceed vice versa.




72-250 R and R front door latch


B. Coupe

Removal



- 1 Remove door lining (72-100, section B).
- 2 Remove outer door handle (72-240, section B).
- 3 Disconnect actuating control from inner door actuation on door lock.
- 4 Disconnect linkage of door lock from guide lever.

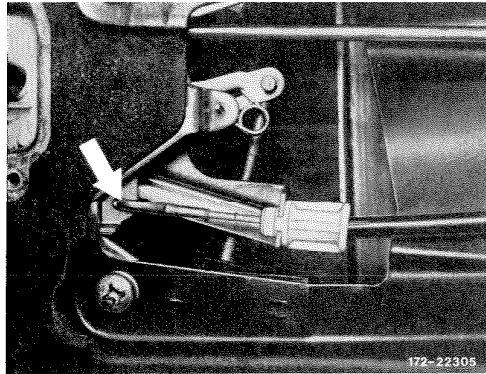

- 5 Unclip connecting rod between door lock and vacuum element at element.

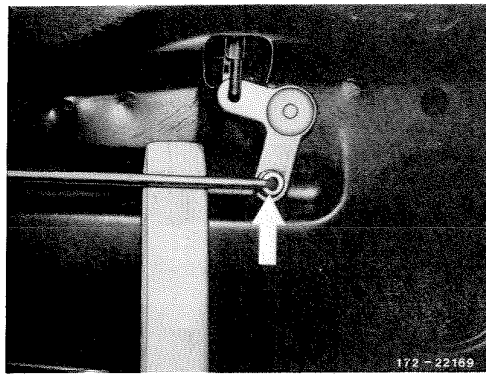


- 6 Remove screws on door lock.

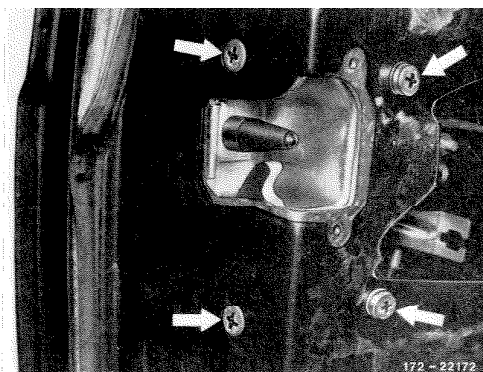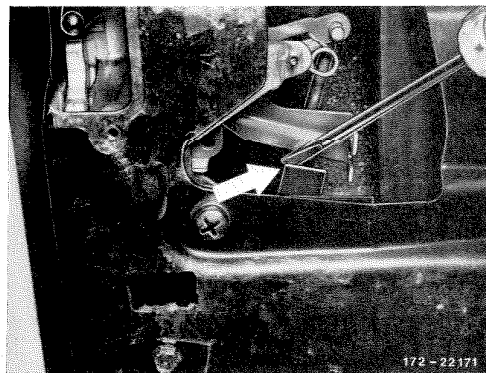

72-250 R and R front door latch

7 Move door lock forward and unclip linkage of door lock.

8 Swivel door lock around rear guide rail in forward direction, move downwards along guide rail and remove out of assembly hole.

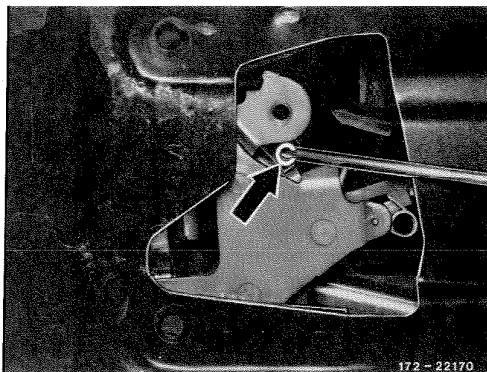

Installation

9 For installation proceed vice versa.

Note: Tighten the two fastening screws on face first and then the screws at inner door panel to 8 Nm.

