


A. Engine hood lock lower half


Removal

1 Remove lamp unit (82-052).

2 Turn adjusting screw on engine hood cable control to the right to slacken hood cable control.

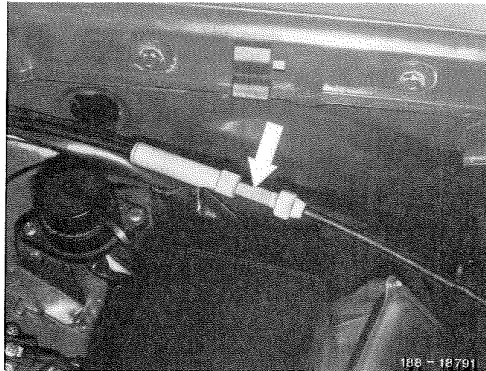


3 Disconnect hood cable control on engine hood lock.

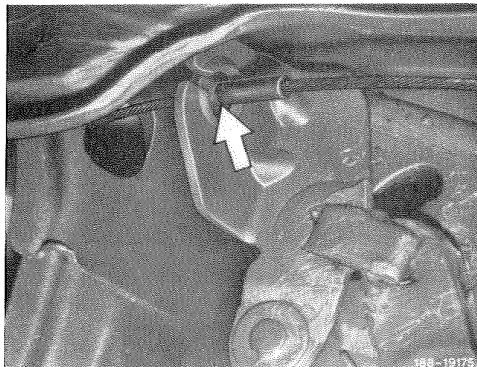


88-320 R and R hood lock

4 When removing lefthand engine hood lock, disconnect hood cable control on counterbearing of engine hood lock.

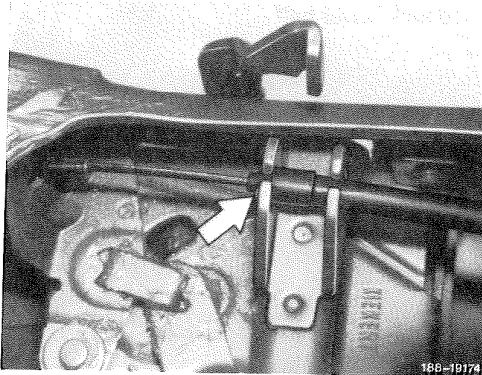

5 Unscrew fastening screws on engine hood lock lower half.

6 Remove engine hood lock.

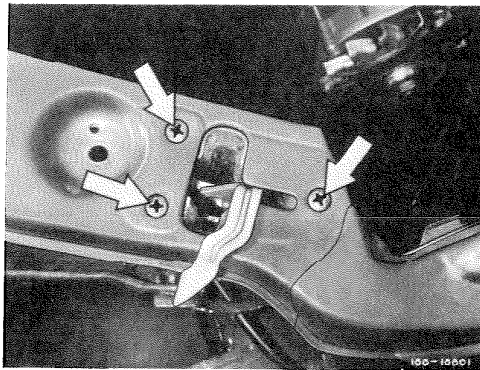


Installation

7 For installation proceed vice versa.

B. Engine hood lock upper half

Removal

1 Unscrew screws and remove engine hood lock upper half together with shims.

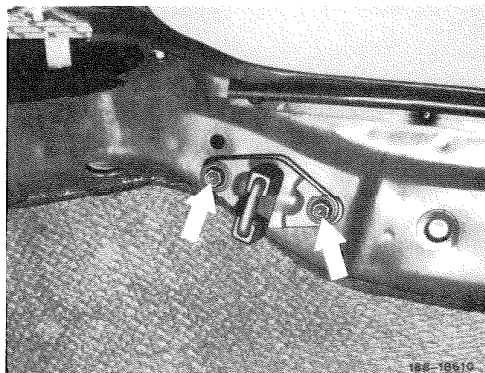

Installation

2 For installation proceed vice versa.

Note: Adjust engine hood lock upper half by adding shims in such a manner that the closing force in center between locks amounts to 400 N up to max. 900 N. The force on actuating lever for engine hood cable control should not exceed 150 N.

