


88-910 R and R power mirror motor


Removal

- 1 Remove mirror glass (88-900, section A).
- 2 Remove electrically adjustable outside rear view mirror on driver's door (88-905).
- 3 Remove rubber cover on outside rear view mirror and unscrew screws on plug connection underneath.

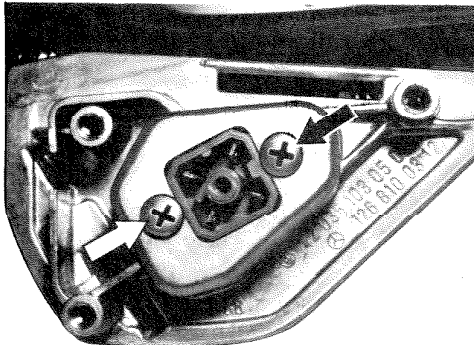


188-20181

- 4 Unscrew fastening screws on electric motor and remove motor together with adjusting mechanism.

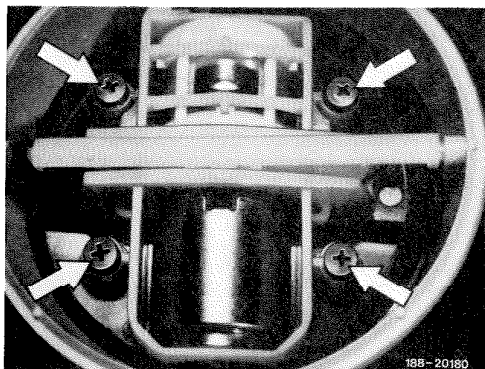

188-20180


- 5 Unscrew screws on housing.

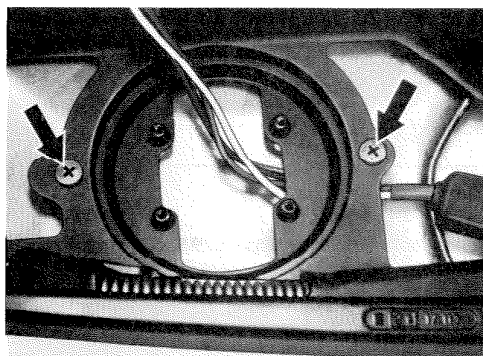

188-20179

88-910 R and R power mirror motor

6 Lift housing and pull out supply cable.

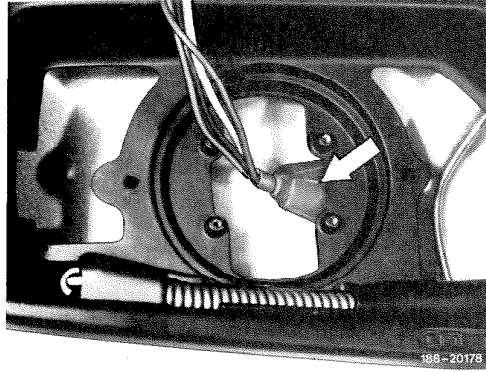

Installation

For installation proceed vice versa.