


A. Sedan


Removal

1 Unscrew screws at front on both seat guide rails, while pushing driver's seat toward the rear and height adjustment down.

2 Push driver's seat forward and height adjustment up.

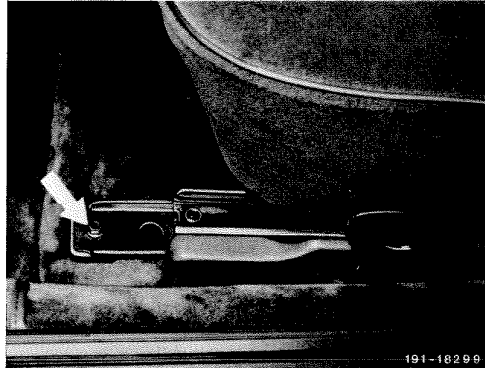


3 Unscrew screws at the rear on both seat guide rails.

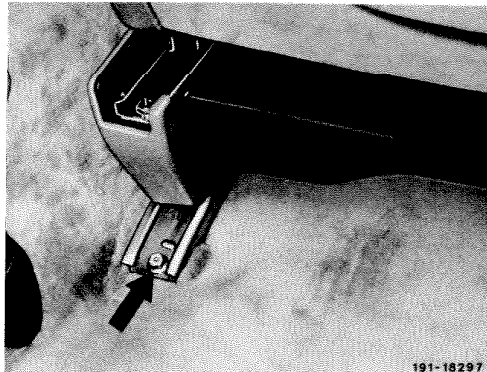

4 Slightly raise driver's seat and pull out of slide rail in forward direction.


5 Remove driver's seat.

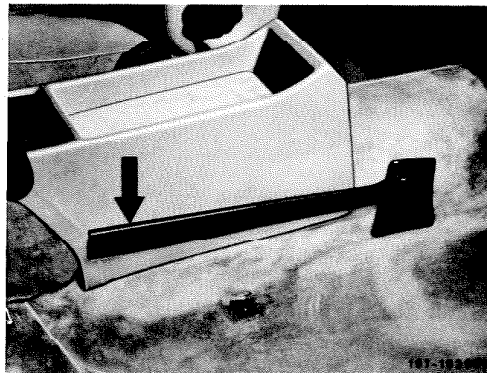


91-100 R and R driver seat

Installation

6 Introduce driver's seat from the front into slide rail.

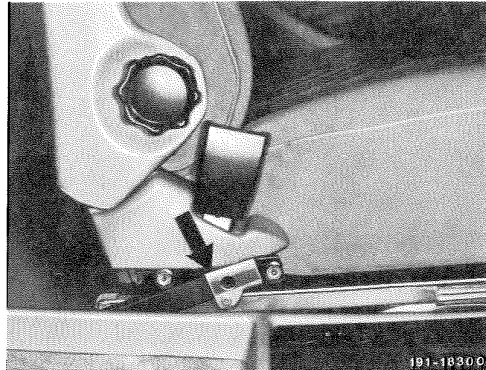


7 Attach seat guide rails at the rear and slightly tighten screws.

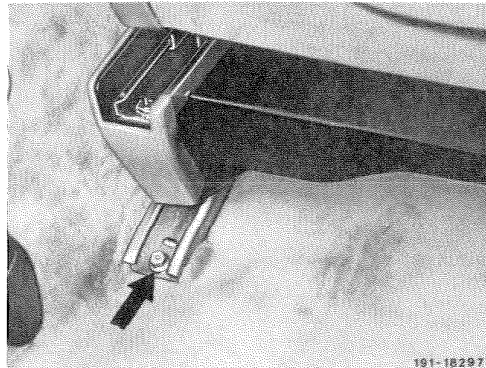

8 Push driver's seat toward the rear and seat height adjustment down.

9 Attach seat guide rails at the front.


10 Tighten fastening screws at front and rear.

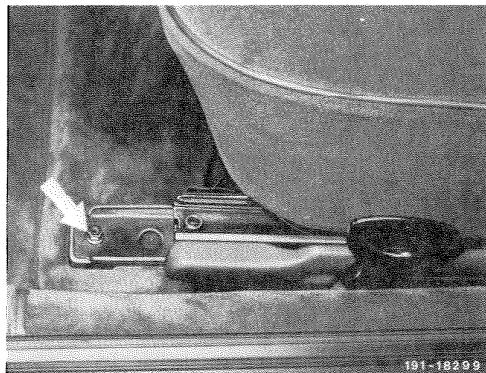


B. Coupe

Removal


- 1 Slip driver's seat toward the rear and remove screw at seat guide rail left and right.
- 2 Slip driver's seat forward.

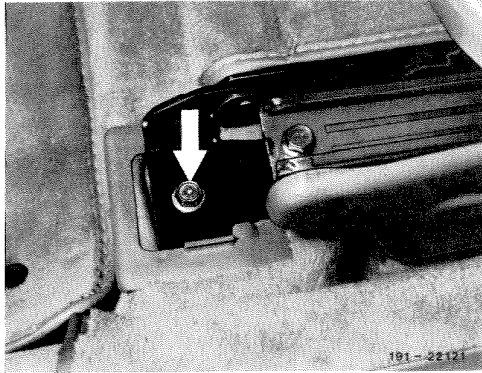

- 3 Remove screw on seat guide rail rear left and right.

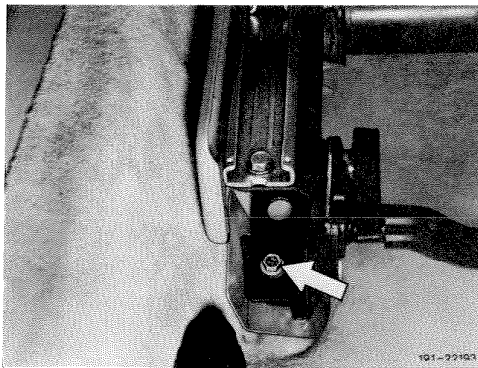


- 4 Push out cover at slide rail rear and remove screw located underneath.
- 5 Pull side rail toward the rear out of seat fittings.

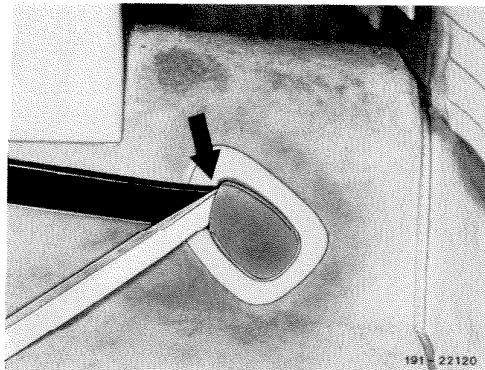

- 6 Tilt driver's seat slightly to the rear, separate both electric plug couplings and vacuum line.
- 7 Remove seat.

Installation

- 8 For installation proceed vice versa.

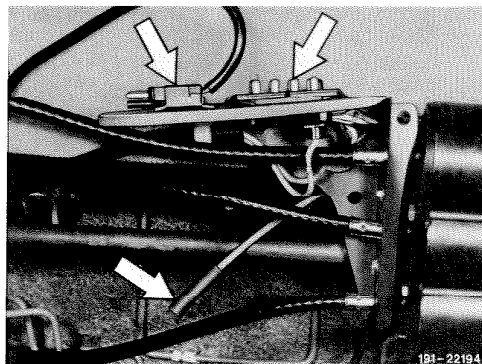

Plug couplings and vacuum line
(seat removed)