


## 91-165 R and R, reconditioning driver seat folding arm rest

---

### Removal


---

1 Remove screws on backrest and then remove rear wall.

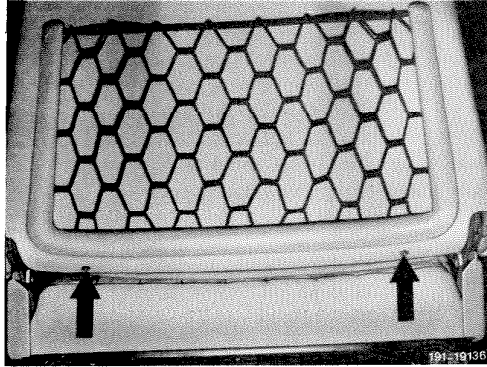

2 Unscrew nut (5) and remove toothed washer (4).

3 Remove armrest (3) from backrest frame.

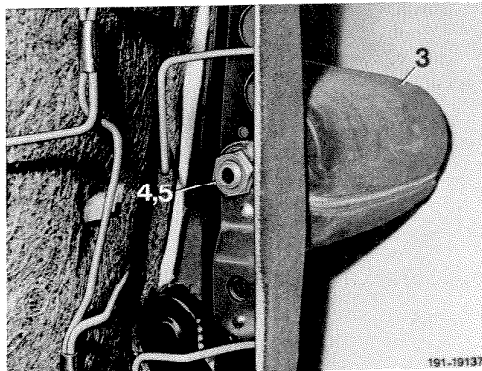

- 3 Armrest
- 4 Toothed washer A 19
- 5 Nut BM 18x1.5

### Installation

---

4 For installation proceed vice versa.


## 91-165 R and R, reconditioning driver seat folding arm rest

---

### Reconditioning removed armrest

---

1 Push off rosette.

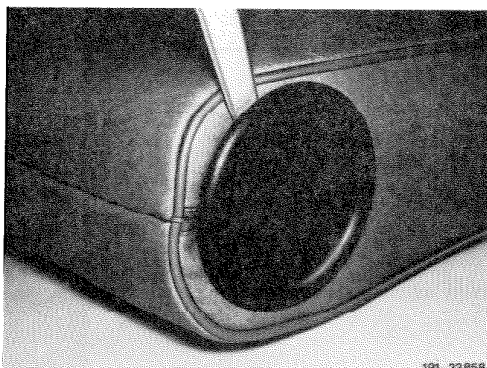


2 Loosen cover:


1st version: Open zipper

2nd version: Cut welded sealing strip at weld points  
and remove cover starting at one side.


3 Fold back cover or remove, respectively.

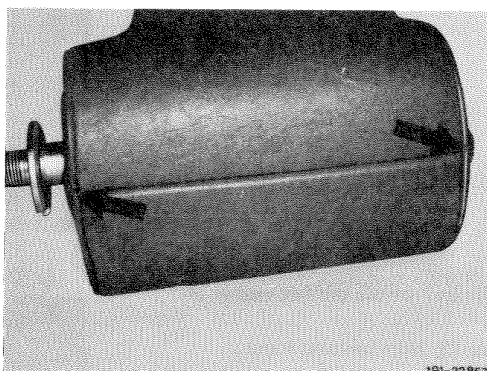

4 Lift off locks and detent rollers with actuating button pushed.

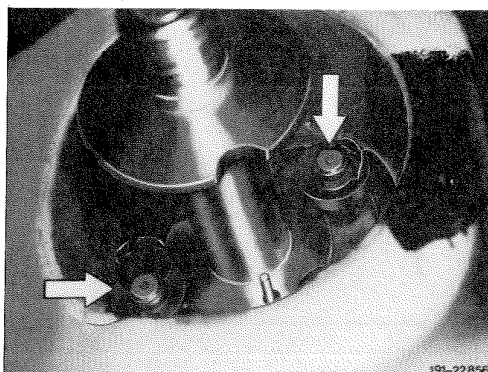


5 Remove actuating button with springs and disassemble, if required.

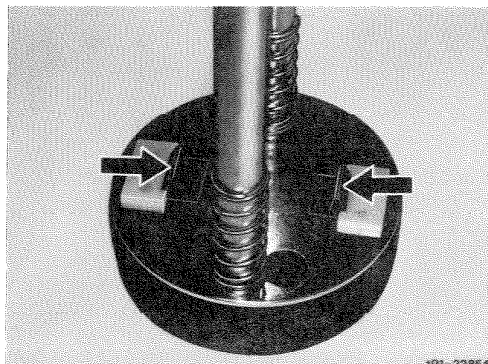


## 91-165 R and R, reconditioning driver seat folding arm rest

---

6 Remove locking ring from bearing shaft and pull out bearing shaft with bushing.

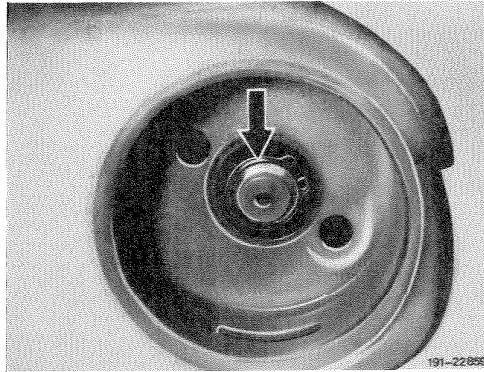

7 Remove coiled spring from bearing shaft.

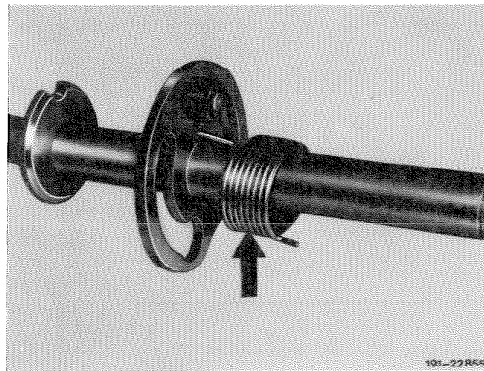

### Assembling armrest

---

8 For assembly proceed vice versa.

**Nota:** In the event of repairs, sewing is done on lateral sealing strip range on cover.