

## 91-170 R and R rear seat cushion and rear seat backrest


---

### A. Sedan

#### Removal

---


- 1 Push locking lever left and right up to stop in outward direction and raise rear seat cushion at the front.
- 2 Lift off rear seat cushion.

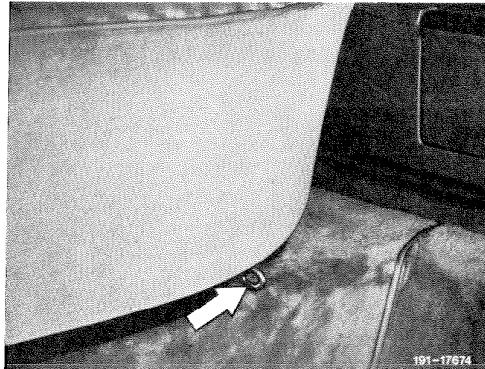

- 3 Unscrew screw at rear seat backrest left and right.



- 4 Unscrew screw under center armrest.
- 5 Remove rear seat backrest in upward direction.

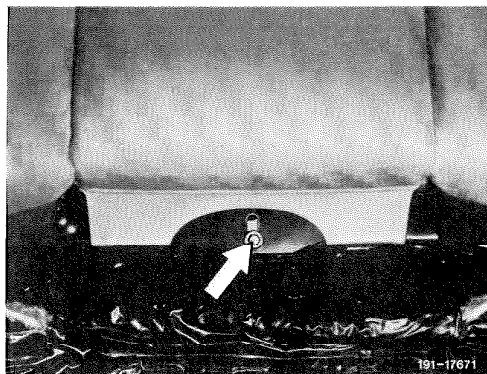


## 91-170 R and R rear seat cushion and rear seat backrest

---


### Installation

---


6 Introduce rear seat backrest from above into five fastening plates.

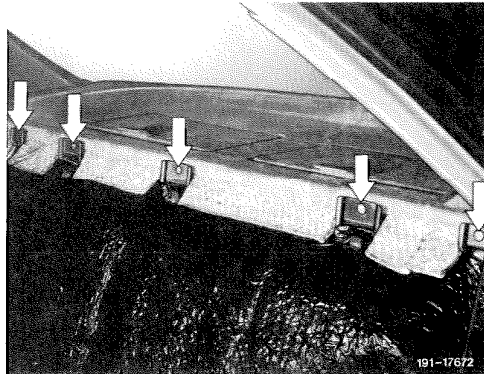

7 Screw down rear seat backrest below.

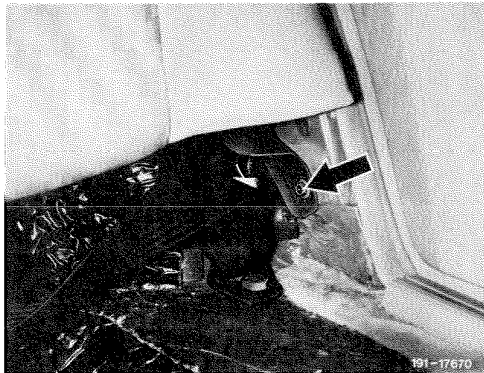

8 Slide rear seat cushion with rear edge up to stop under rear seat backrest and push down at the front until seated.

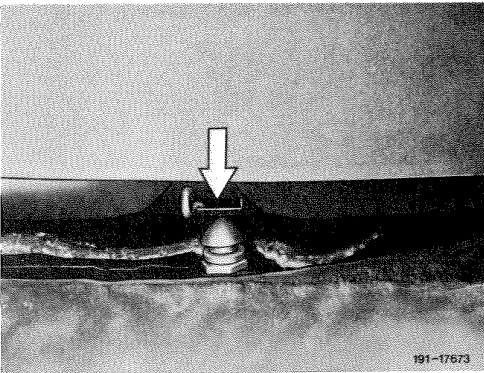

## 91-170 R and R rear seat cushion and rear seat backrest


---

### B. Coupe


#### Removal

---


1 Push both locking levers on rear seat cushion in outward direction, lift off rear seat cushion at the front and remove in upward direction.

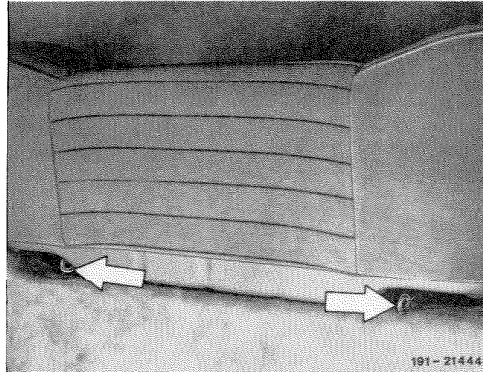

2 Pull rear seat backrest out of holders on rear wall in upward direction.

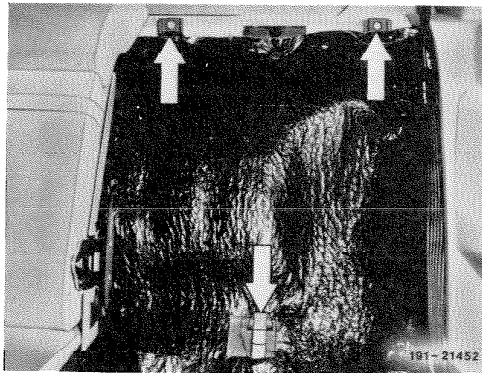


3 Remove screw on intermediate padding above center arm backrest.

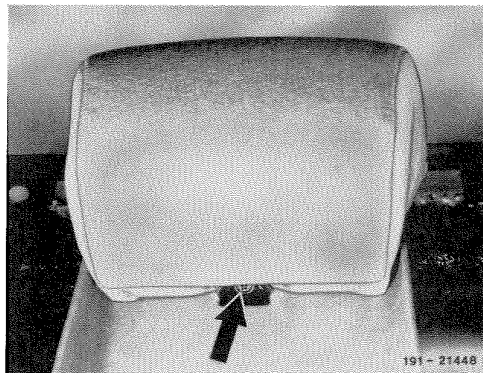

4 Pull intermediate padding out of holders (arrows) in upward direction.

**Note:** The intermediate padding can be removed and installed in the same manner also without removing rear seats.

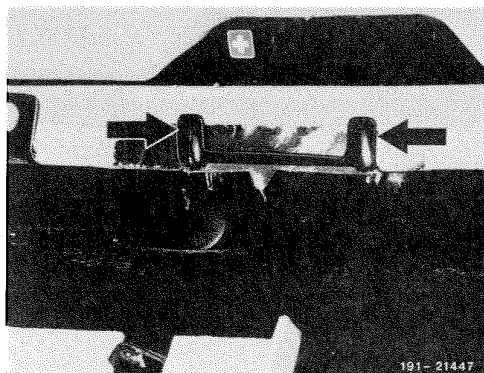


## 91-170 R and R rear seat cushion and rear seat backrest

---

5 Unscrew center armrest and remove.

**Note:** Both rear seats must be removed to remove center armrest.

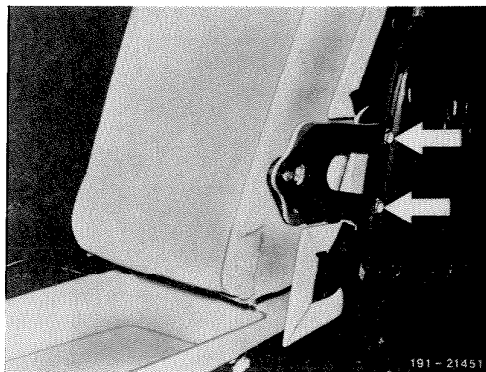

### Installation

---

6 Fasten intermediate padding and screw down.

7 Install center armrest.

8 Attach rear seat backrest to rear wall.

9 Slip rear seat cushion under rear seat backrest, and engage in locking pins (arrows).

