


91-505 R and R adjustable front seat belt anchor


Removal

1 Remove paneling on center pillar (68-470).

2 Unscrew screw on belt guide fitting, let safety belt run into automatic reel and put belt guide fitting aside.

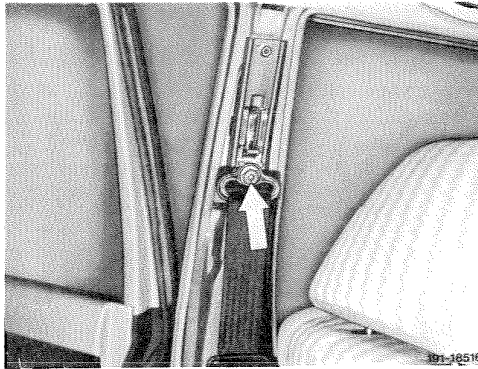

3 Unscrew screws on adjustable belt anchor and remove belt anchor.

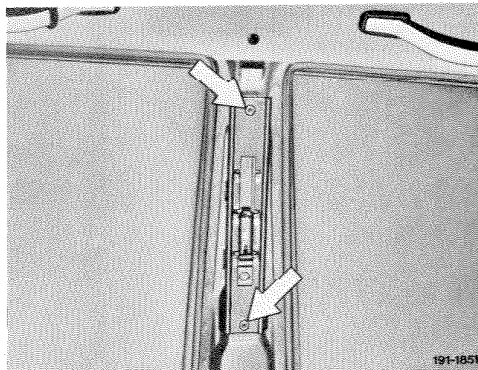

Installation

4 For installation proceed vice versa.

Caution!

In order to avoid damage to the seat belts, always ensure after the installation of the cover that the upper belt return fitting can be moved freely. Correct the installation position of interfering covers or linings.