


91-508 R and R belt positioner


A. Removing and installing complete belt positioner

Remove

- 1 Remove rear seat cushion and rear seat backrest (91-170).
- 2 Remove side wall lining in rear compartment (68-456).
- 3 Remove screw on belt guide fitting.

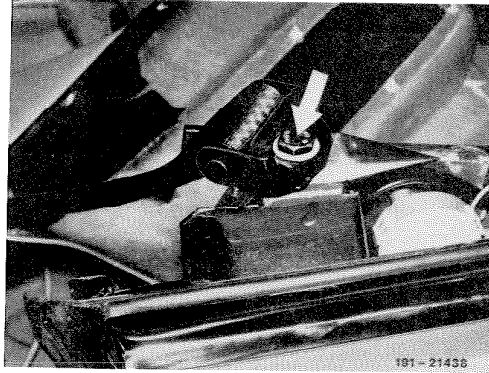


- 4 Separate plug connection on belt positioner and unscrew switching unit.

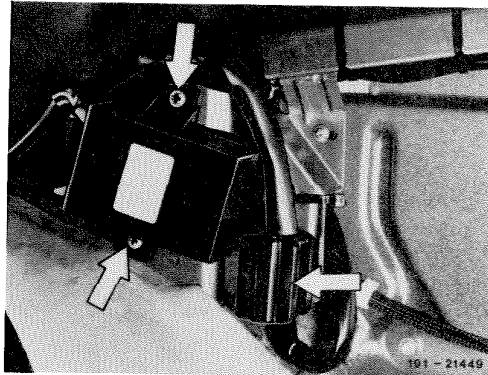

- 5 Unscrew belt positioner and remove.

Installation


- 6 For installation proceed vice versa.

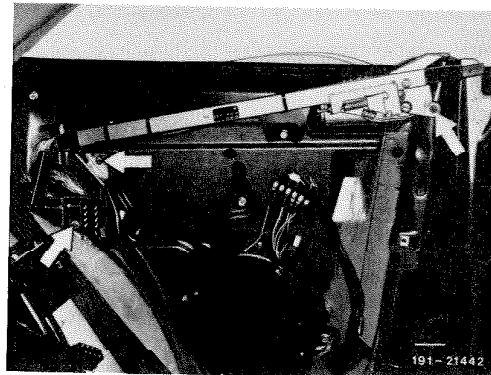

B. Removal and installation of rack

Removal

- 1 Move belt positioner into operational position by switching-on ignition and closing door.
- 2 Disconnect battery within 30 seconds.
- 3 Remove guide bracket with safety belt from rack and pull rack out of guide rail.

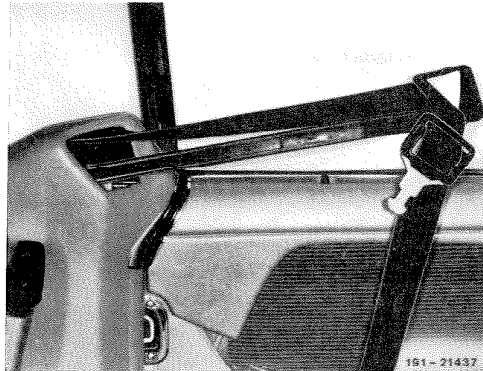

Installation

- 4 Push rack approx. 30 mm into guide rail and plug-on guide bracket.
- 5 Connect battery.