

91-510 R and R rear seat belt

Note


When reeling up belt, any noise on automatic reeling mechanism is operational.

In the event of complaints, unacceptable noises can be eliminated by exchanging safety belt. Never use oil or grease to eliminate noise.

Likewise, do not disassemble automatic reel, since the preloaded spring may be cause of an accident. Opened automatic reels are no longer accepted for warranty claims.

Latch on belt twisted


If the latch on belt has been twisted, pull back to its normal position as shown on illustration.

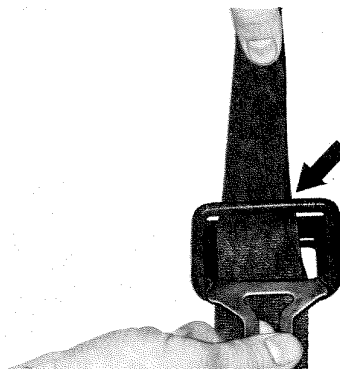

191-19866

Removal


- 1 Remove paneling on rear pillar (68-449).
- 2 Unscrew fastening screw on side member.
- 3 Pull safety belt through paneling on rear pillar.

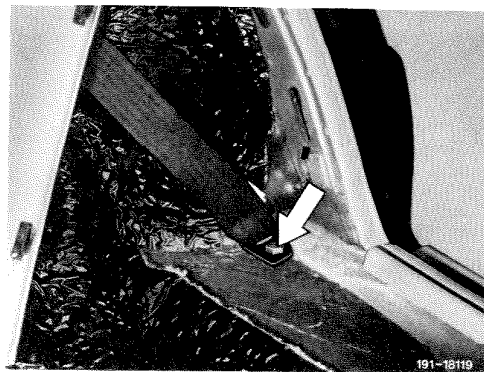


191-18119

4 Unscrew fastening screw on rear pillar.

5 Install insulating (damping) mat on rear wall in range of automatic reel.

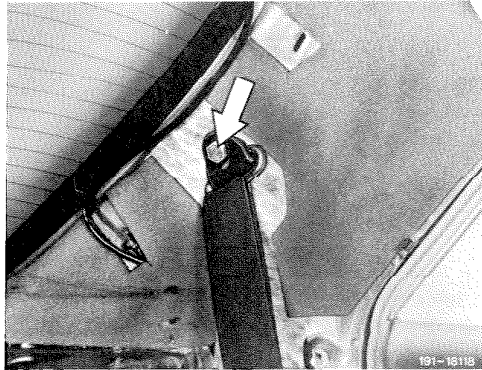

6 Unscrew screw on automatic reel and remove automatic reel.

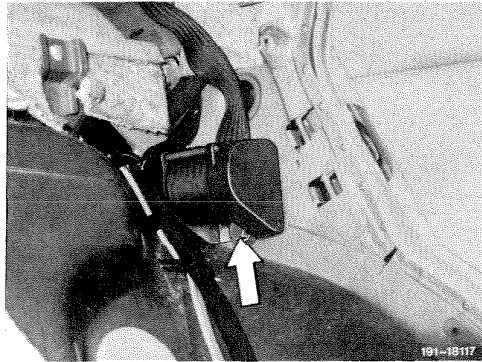

Installation

7 For installation proceed vice versa.

Note: When installing automatic reel, pay attention to perfect seat of lock (arrow).

