


Special tool

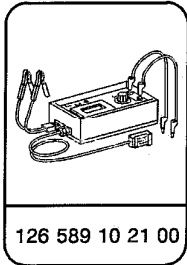

Type 1


Note

Type 2 is distinguished by:

- Modified arrangement of red, 10-pin plug from footrest to panel situated below footrest.
- Modified arrangement of SRS energy accumulator from footrest to panel situated below footrest.

Removal


- 1 Turn ignition key to position 0, disconnect and insulate negative battery terminal.
- 2 Remove floormat from front passenger's footwell.
- 3 Remove footrest from bulkhead (arrow).

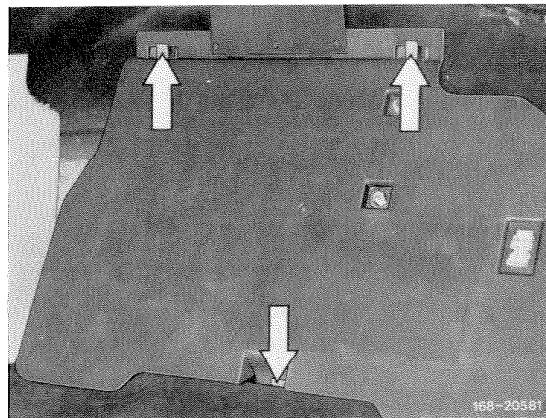

168-20581

91-640 R and R SRS energy accumulator


4 Disconnect red 10-pin control unit plug under footrest.

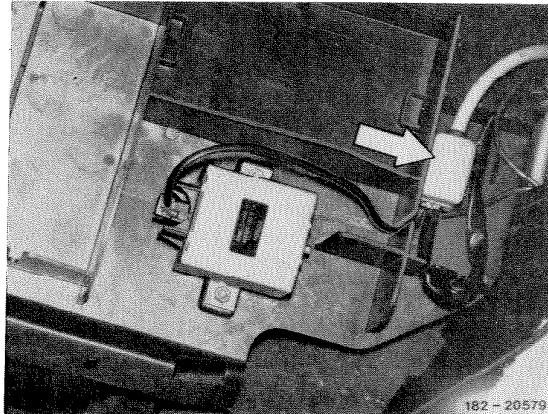

182 - 20579

182-20579


5 Disconnect plug-connector from SRS energy accumulator.

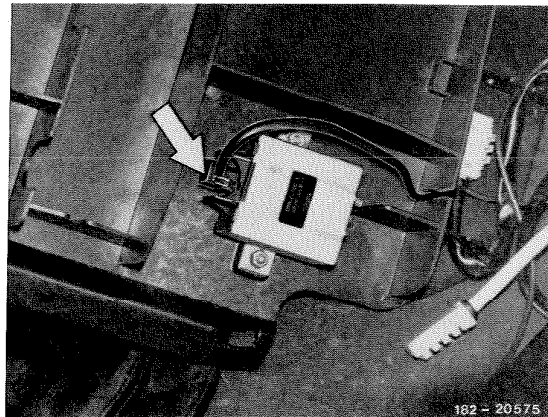

182 - 20575

182-20575

6 Unscrew and remove SRS energy accumulator.

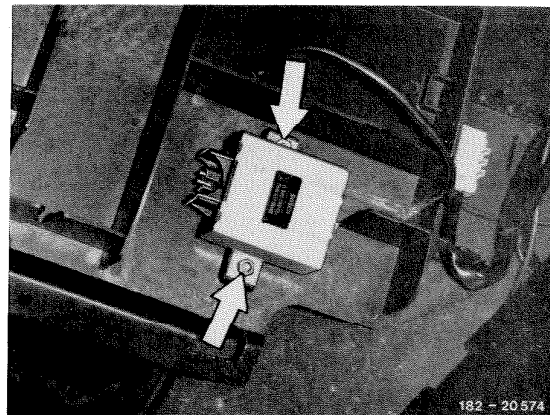


182 - 20574

182-20574

Installation

- 7 Install SRS energy accumulator under footrest, tightening screws securely.
- 8 Connect SRS energy accumulator with plug-connector (arrow).
- 9 Check system with test instrument (91-700).
- 10 Continue installation in reverse order to removal.
- 11 Check system with SRS MIL.

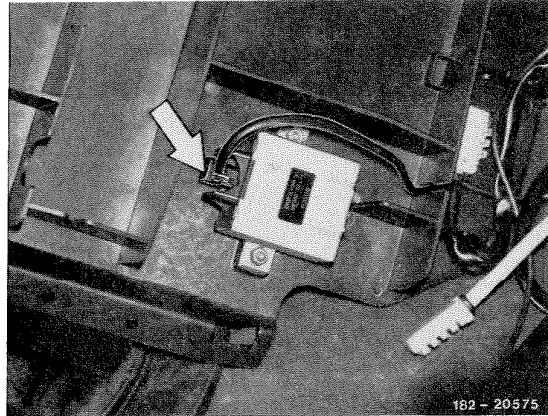


182-20575
182-20575

Type 2

Removal


- 1 Turn ignition key to position 0, disconnect and insulate negative battery terminal.
- 2 Remove floor mat from front passenger's footwell.
- 3 Remove screw at top of footrest. Raise footrest and remove.
- 4 Disconnect red 10-pin plug (X29/9) on panel.

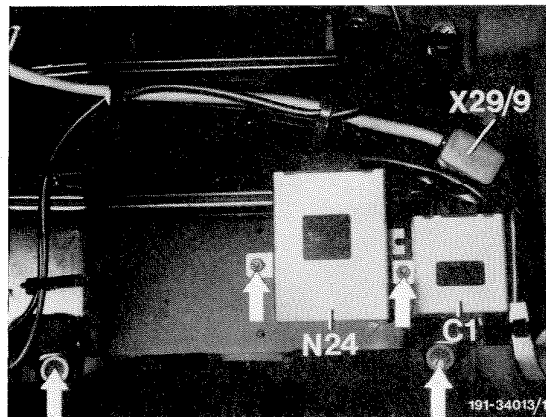

191-34013/1
191-34013/1

91-640 R and R SRS energy accumulator

- 5 Remove right side door sill.
- 6 Press off edge trim to the right, remove side cladding from front passenger's footwell.
- 7 Unscrew and remove the two lower panel clips (arrow).
- 8 Unscrew and remove SRS energy accumulator.
- 9 Disconnect plug-connector from SRS energy accumulator terminals.

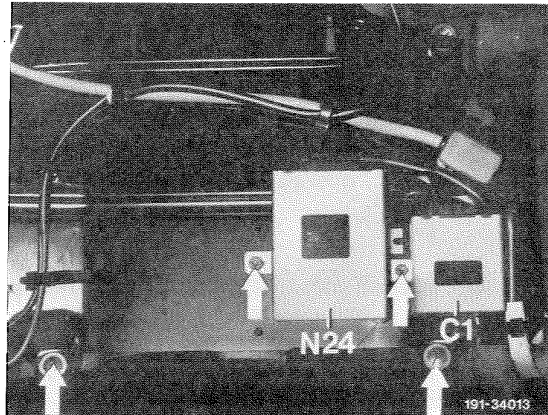

191-34013

Installation

- 10 Connect plug-connector to SRS energy accumulator terminals.
- 11 Install SRS energy accumulator securely.
- 12 Check system with test instrument (91-700).
- 13 Continue installation in reverse order to removal.
- 14 Check system with SRS MIL.