



Removal

- 1 Disconnect battery.
- 2 Completely remove wiper system (82—860).
- 3 Loosen hose clamps on heat exchanger and pull off hoses.

Note: Prior to pulling-off hoses, place a rag under connections of heat exchanger to catch emerging coolant.

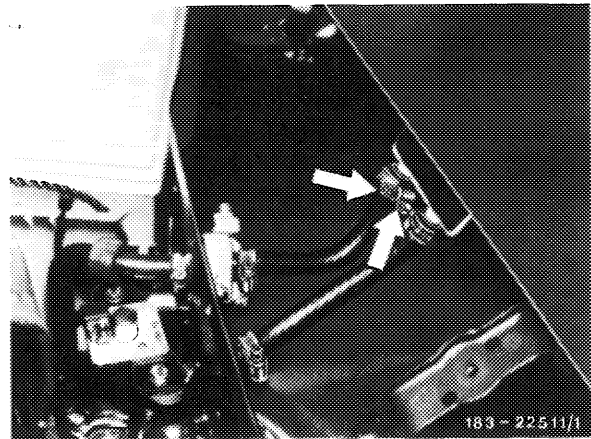

- 4 Expand the two holding clamps and pull heat exchanger out toward vehicle center.

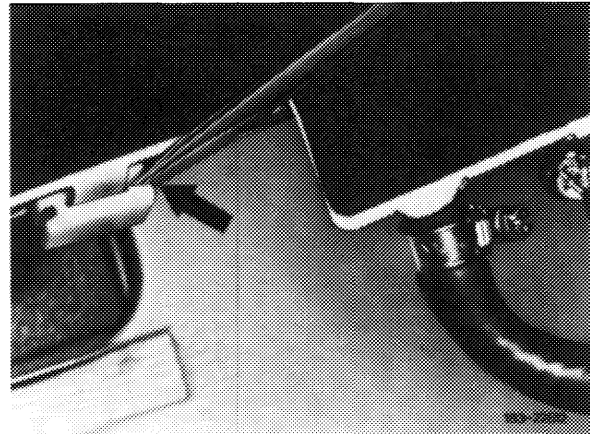

Shown with glass removed

Installation

- 5 For installation proceed vice versa.