


A. Model 107

Removal

- 1 Disconnect regulating rods.
- 2 Force off lock (arrow).
- 3 Push longitudinal regulating shaft to the rear and remove. Pay attention to compressor spring, plastic bushings and joint balls.

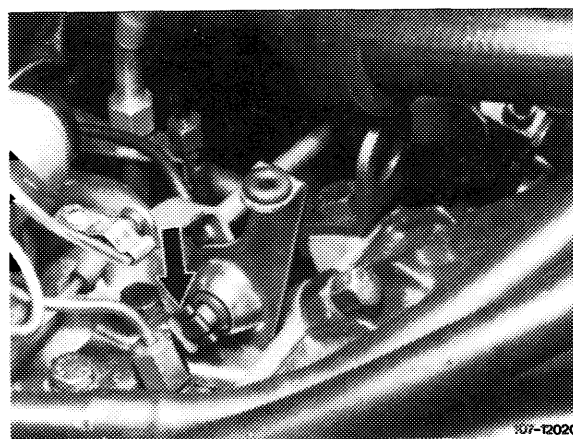


Installation

- 4 For installation proceed vice versa. Grease bearing points as well as ball sockets of regulation with Molykote-Longterm 2.
- 5 Adjust regulating linkage (30—300).

B. Model 126

Removal

- 1 Disconnect regulating rods.
- 2 Force off lock (arrow). Remove spring retainer and compression spring.
- 3 Push longitudinal regulating shaft to the rear and remove. Pay attention to plastic bushing and joint ball.

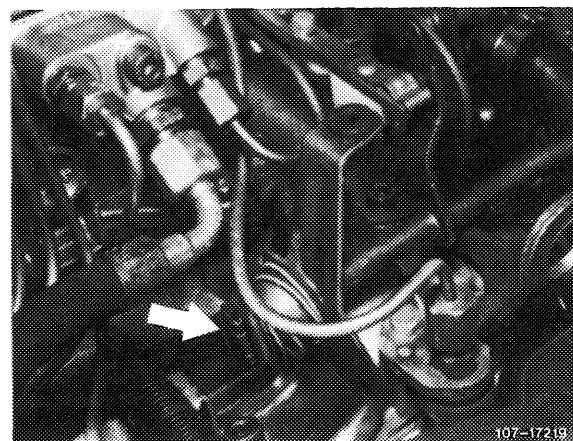

Installation

4 For installation proceed vice versa. Grease bearing points as well as ball sockets of regulation with Molykote-Longterm 2.

5 Adjust regulating linkage (30–300).