

01—025 Measuring oil consumption

Special tools

Oil dip stick with millimeter scale
for engine **with** oil suction

115 589 15 21 00

Oil dip stick with millimeter scale
for engine **without** oil suction

110 589 11 21 00



 
Oil telethermometer

116 589 27 21 00



Valve for interrupting oil return flow

110 589 00 91 00



Note

Measure oil consumption by means of oil dip stick
with millimeter scale in combination with pertinent
data sheet.

The oil measuring procedure is shown on front page
of data sheet.

Read oil consumption, indicated in mm on dip stick,
on basis of diagram on back page of data sheet in cc.

Data sheets

Engines	Print No.
115.982/983	800.99.228.00/B
116.992/993	German/English
117.982/983	800.99.228.01/B
117.992/993	French/Spanish
116.984/985	800.99.406.00B
117.985/986	German/English
	800.99.406.01B
	French/Spanish

Attention!

To eliminate faulty measurements, check engine oil
for dilution by fuel prior to measuring consumption.

