


47—705 Removal and installation of fuel expansion tank (model 107.04)

Note


On models 107.02 and 116 the fuel expansion tank is integrated in fuel tank and cannot be disassembled.

Removal


- 1 Remove hard top. Open top lock and remove top.
- 2 Unscrew both fastening screws for fuel expansion tank (arrows).

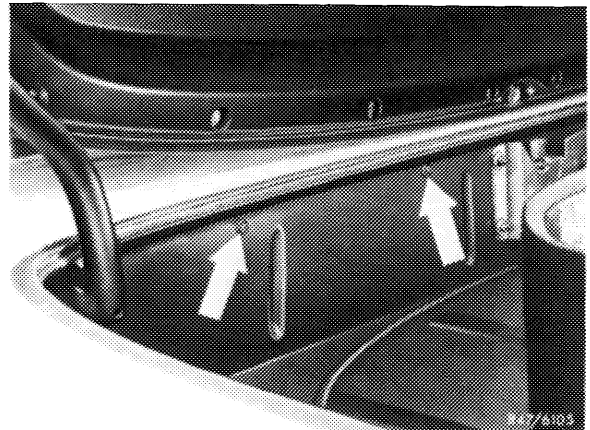

- 3 Remove rubber mat and vehicle jack from trunk.
- 4 Unscrew rear wall and remove.

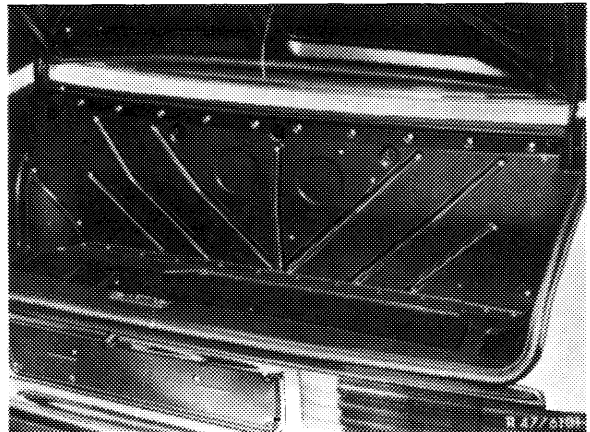

- 5 Loosen fuel hoses (2) on expansion tank (1).
- 6 Remove rubber sleeve from vent line (arrow).

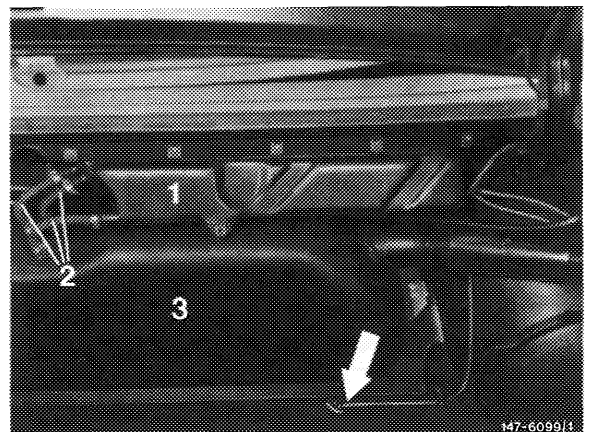


Fuel expansion tank with 3 connections

- 1 Fuel expansion tank
- 2 Fuel hoses
- 3 Fuel tank

Fuel expansion tank
with 5 connections

- 1 Fuel expansion
tank
- 2 Fuel hoses
- 3 Fuel tank

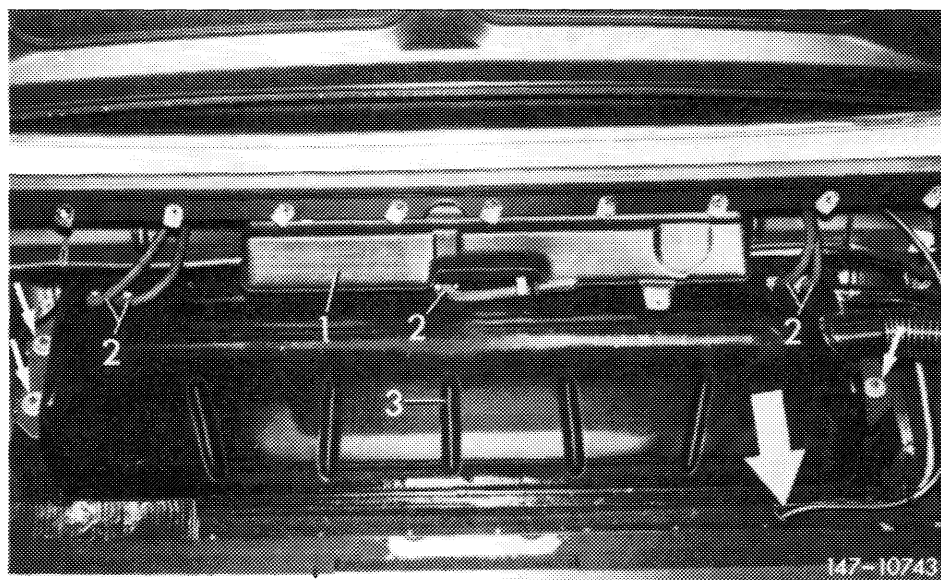

7 Remove expansion tank while pulling out vent
line (large arrow).

Installation

8 For installation proceed vice versa. Make sure that
the positive and the negative venting line are installed
first behind fuel tank vent connection.

**When tightening hose clips, apply counterhold to
connections of expansion tank.**

