

14—455 Renewing intake manifold (intake manifold removed)

Job No. of flat rates or standard texts and flat rates data 14—255.

Renewing

- 1 Remove and install intake manifold (14—450).
- 2 Remove and install injection valves and insulating sleeves (07.3—215).
- 3 Remove and install mixture control unit with air guide housing (07.3—225).
- 4 Unscrew all unscrewable parts on removed intake manifold and mount on new intake manifold with new gaskets.
- 5 Unscrew intake manifold upper half from intake manifold lower half. For this purpose, loosen vacuum line for brake unit on intake manifold lower half, then unscrew fastening screw and pull from rubber adapters.
- 6 Mount intake manifold lower half with new rubber adapters to intake manifold upper half.