

A. Model 107

Removal

- 1 Unscrew screw (20).
- 2 Unscrew engine mount (17) from cross member.
- 3 Lift engine at oil pan by means of pit lift.

Note: Use wooden base to prevent damage to the oil pan.


- 4 Remove engine mount.

Installation

- 5 For installation proceed vice versa.
- 6 Tighten screw (20) to 75 Nm.

Caution!

Check regulating linkage for proper function.

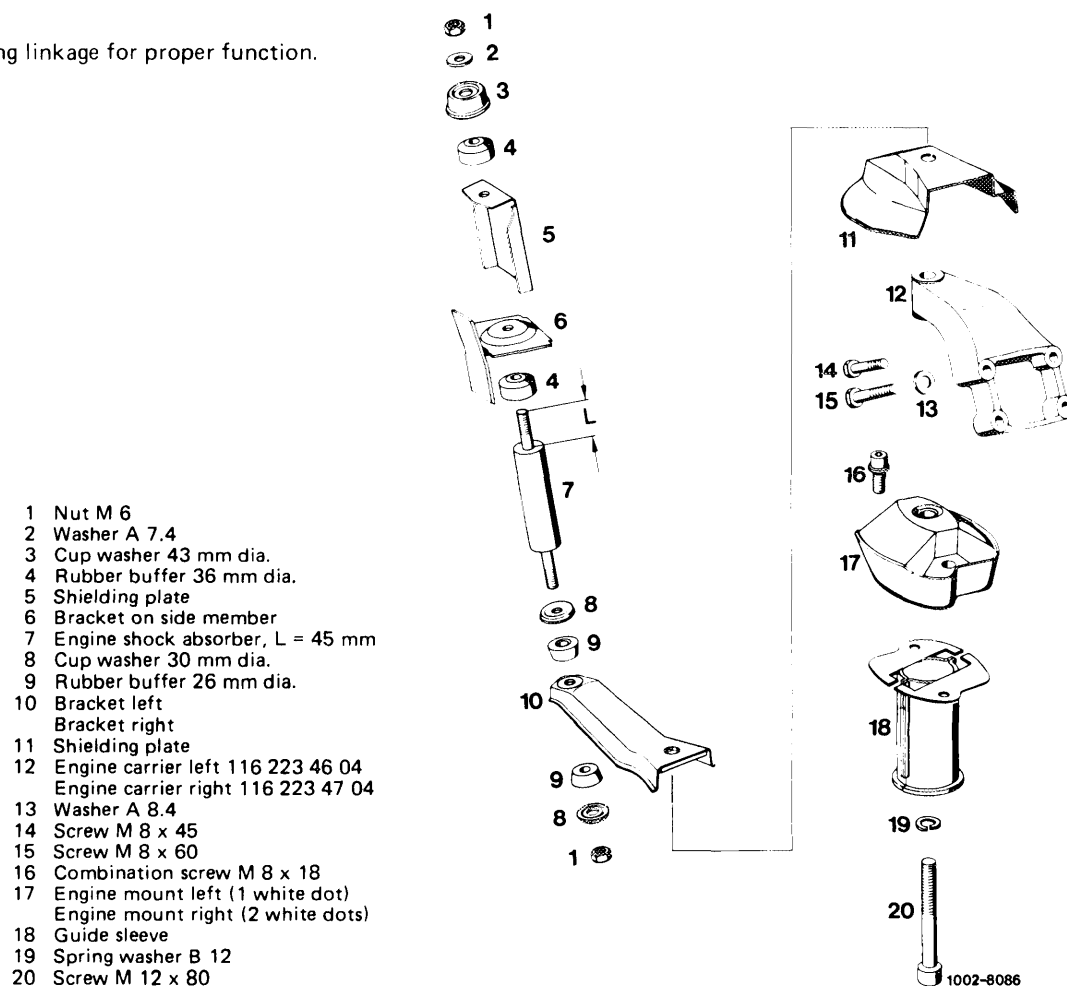

B. Model 126

Removal


1 Unscrew screw (15, arrow) from underside of vehicle.

2 Unscrew nut (1) from engine shock absorber below.

3 Lift engine at oil pan by means of pit lift.

Note: Use wooden base to prevent damage to oil pan.

4 Unscrew screws (13) and remove engine mount.

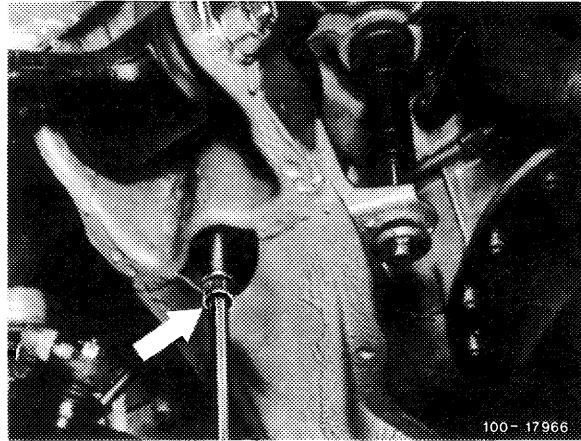

Installation

5 For installation proceed vice versa.

Note: The shielding plate is located at the left.

6 Tighten screw (15, arrow) to 70 Nm.

