

Model 123 124 129 201

Oil grades

approved oil

Refer to MBNA Factory Approved
Service Products list**Capacities in liters**

Transmission type

Capacity

4-speed transmission

716.0

1.6

716.21

1.3

5-speed transmission

717.40

1.6

717.41


1.5

717.43

1.5

717.45

1.7

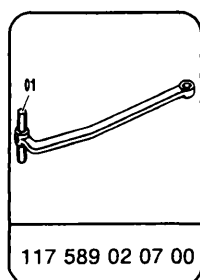Special tools**Commercial tools**


14 mm hex. driver insert, 1/2" square drive

obtain locally


Note: When performing this job number, the engine compartment lower panel or the noise encapsulation panel must be removed, and replaced after completing all maintenance work (refer to job number 6190 or 9400).

Warning! To help prevent risk of injury when opening filler plug on model 201, wear leather gloves; place an extension on wrench; or open filler plug by striking wrench.


- Drain oil only with transmission at operating temperature; remove both oil filler plug and drain plug. Clean drain plug with magnet.
- Install oil drain plug and torque to max. 60 Nm.
- Fill oil up to over flow (upper arrow). Install oil filler plug and torque to max. 60 Nm.
- Check transmission for leaks at operating temperature.

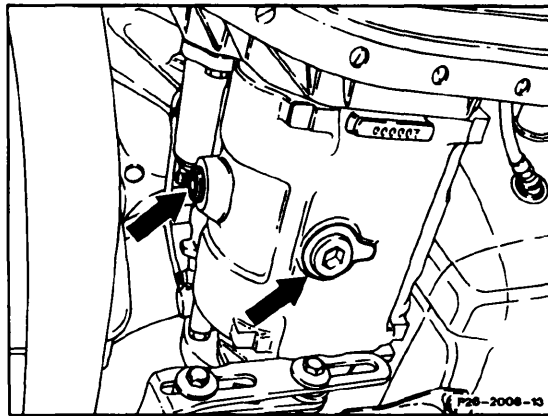


Transmission 716.0

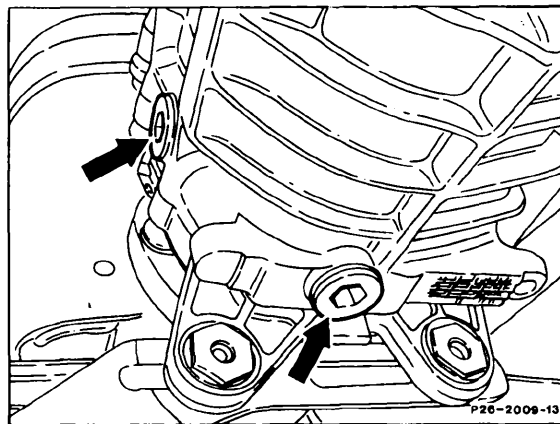

Transmission 716.21

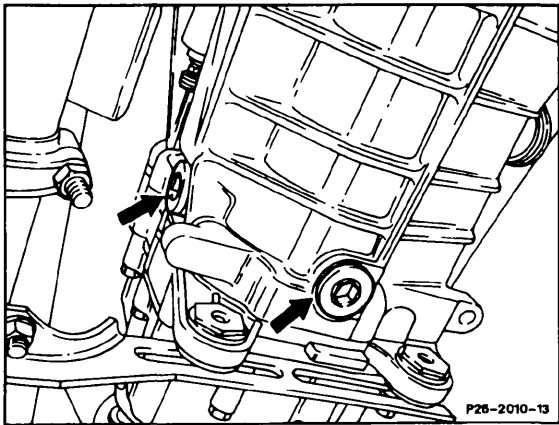

Transmission 717.40

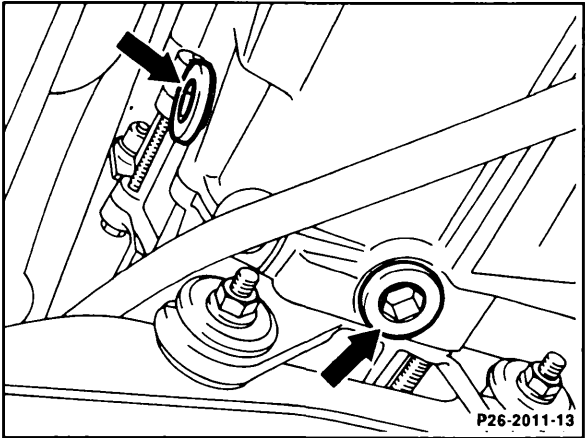

Transmission 717.41, 717.43, 717.45