

Engine 616 617.912

- Turn idle speed adjuster knob on instrument panel fully to the right and check distance between adjusting ring/nipple and shaped spring, adjust, if necessary. Distance should be approx. 1.0 mm.
- With engine off, depress accelerator and turn idle speed adjuster knob to the left.
- With engine running, idle speed should now be approx. 1100 rpm. Adjust with screw (2) if necessary.

