

Indicator Lamp Symbols**Function Indicator Lamp**

High beam

Warning Lamps

(should go out with the engine running unless)



Battery not being charged.
See page 64



 
Brake fluid low (except Canada).
Parking brake engaged.
See pages 58, 67



Brake fluid low (Canada only).
Parking brake engaged.
See pages 58, 67



Brake pads worn down.
See page 67




Engine oil level low.
See page 64



Coolant level low.
See page 66



 Fluid level for windshield and
headlamp washer system low.
See page 66



Exterior lamp failure.
See page 65



ABS malfunction.
See page 68



SRS malfunction.
See page 43



ASR malfunction.
See page 69



Engine malfunction.
If the lamp comes on when the engine is running, it indicates a malfunction in the O₂-sensor on Federal version vehicles, and fuel injection system or emission control system on the California version vehicles. In either case, we recommend that you have the malfunction checked as soon as possible.
See page 71