


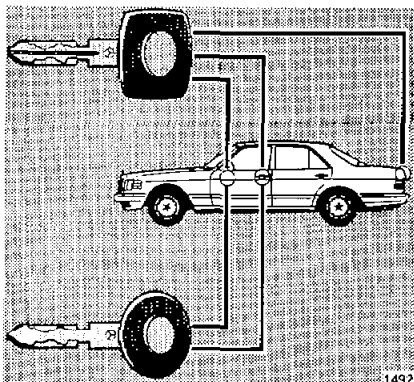


Car Keys

Included with your vehicle are two master keys, one valet key and one flat (master) key.

Master Key – square head – fits all locks on the car. Arms/disarms the anti-theft alarm system.

Valet Key – round head – fits only the door locks and the steering lock. Arms/disarms the anti-theft alarm system. The valet key will not fit the trunk or console storage compartment locks. This key should be used whenever the car is left with an attendant. Be sure to lock console storage compartment and trunk with the master key.

 Flat Key



The flat key fits all vehicle locks. Arms/disarms the anti-theft alarm system. We recommend that you carry the flat key with you and keep it in a safe place so that it is always handy. Never leave the flat key in the vehicle.

Obtaining Replacement Keys

Your vehicle is equipped with a theft deterrent locking system requiring a special key manufacturing process. For security reasons, replacement keys can only be obtained via your authorized MERCEDES-BENZ dealer.

Warning!

When leaving the vehicle always remove the key from the steering lock. Do not leave children unattended in the vehicle. Unsupervised use of vehicle equipment may cause serious personal injury.