



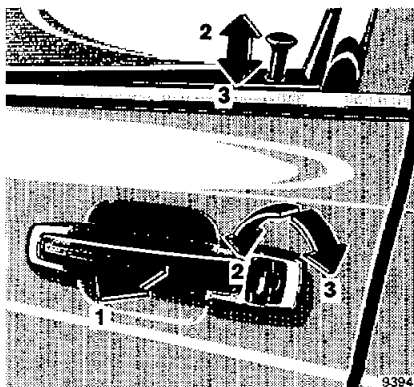

Opening the Doors

From outside: pull handle (1) outwards.

From inside: pull handle (4) in door trim panel.

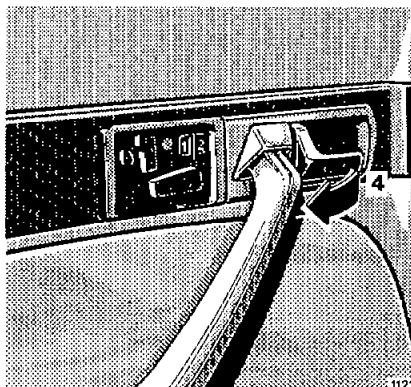

Locking and Unlocking of Doors

From the outside: turn key.

From the inside: actuate door lock button.

- 2 Unlocking (shown on models
- 3 Locking 420/560 SEL)

When the rear door lock buttons are down, the rear doors cannot be opened from the outside or the inside, unless the door lock buttons are first pulled up.

The driver's door can be locked only if it is closed and the door latch has properly engaged.