



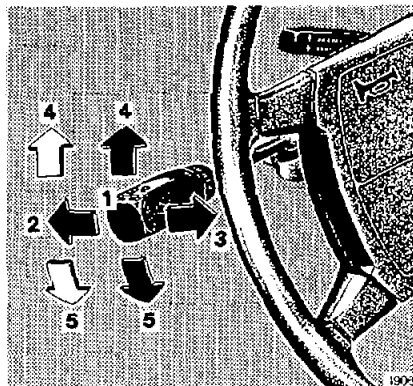

Combination Switch

- 1 Low beam (with exterior lamp switch turned to position )
- 2 High beam (with exterior lamp switch turned to position )
- 3 High beam flasher (high beam available independent of exterior lamp switch position)
- 4 Turn signals, right
- 5 Turn signals, left

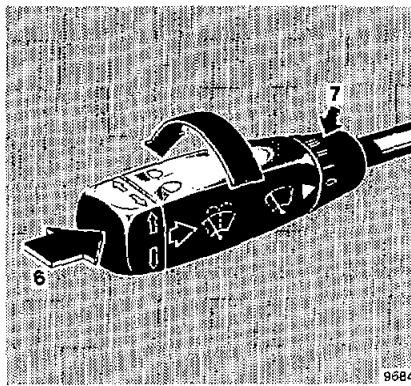

To operate the turn signals, move the combination switch past the point of resistance (up or down). The switch is automatically cancelled when the steering wheel is turned to a large enough degree.

To signal minor directional changes, such as changing lanes on a highway, move combination switch to the point of resistance only and hold it there.

6 Control for

- windshield washer system
- headlamp cleaning system (will work only with exterior lamp switch in position  or  Canada only: Also in position  when the engine is running)

When the washer system is activated, the wipers also operate for a limited time.

The reservoir, hoses, and nozzles of the windshield washer and headlamp cleaning systems are automatically heated.

7 Windshield wiper control

- 0 Wiper off
- I Intermittent wiping
- II Normal wiper speed
- III Fast wiper speed

Note:

If one of the turn signals fails, the turn signal indicator system flashes and sounds at a faster rate than normal. In addition, the lamp failure indicator will come on.

If the windshield wipers smear the windshield, even during rain, activate the washer system as often as necessary. The fluid in the washer reservoir should be mixed in the correct ratio.

For the overload protection of the windshield wiper motor, see page 92.

Mixing ratio

For temperatures above freezing:


MB Windshield Washer Concentrate "S" and water

1 part "S" to 100 parts water
(40 ml "S" to 1 gallon water).

For temperature below freezing:

MB Windshield Washer Concentrate "S" and commercially available premixed windshield washer solvent/antifreeze

1 part "S" to 100 parts solvent
(40 ml "S" to 1 gallon solvent).

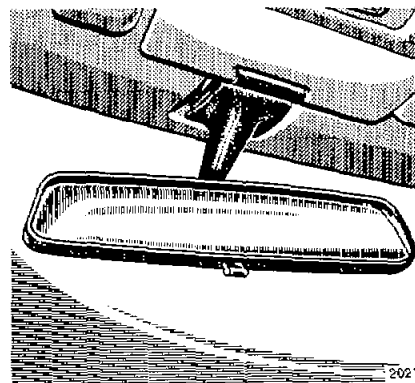

Inside Rear View Mirror

The mirror can be tilted to the anti-glare night position using the lever at its lower edge.

Use your inside mirror to determine the size and distance of objects seen in the passenger side convex mirror.