


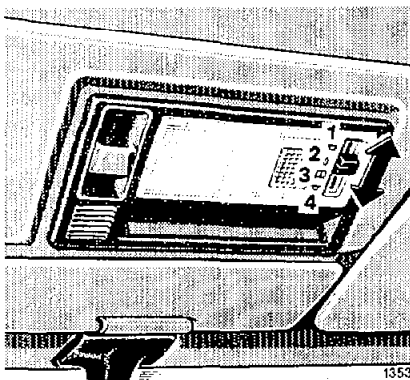


1353

Interior Lamps

The switch for the front lamp (combination interior and reading lamp) has 4 positions.


- 1 Interior and reading lamp switched on continuously.
- 2 Interior and reading lamp switched off.
- 3 Reading lamp switched on continuously.
- 4 Interior lamp is switched on and off (delayed, however, there will be no delay when the key is in steering lock position 2) by the front door contact switches.

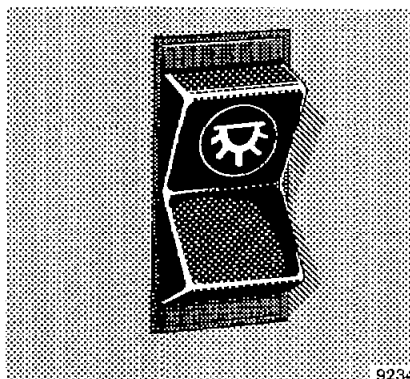

9234

The rear courtesy lamp is switched on and off by the rear door contact switches or by the rocker switch on the instrument panel.

The reading lamps in the rear passenger compartment are switched on and off by a switch in each lamp.

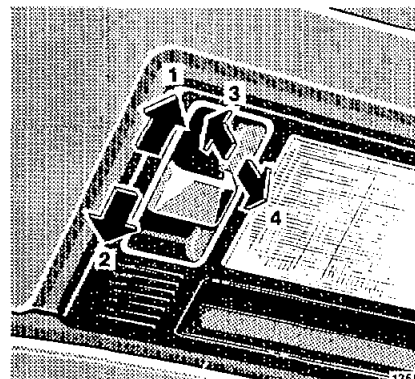

1358

Sliding Roof with Rear Pop-Up Feature

Turn key in steering lock to position 1 or 2. Activate switch.

- 1 to slide roof open
- 2 to slide roof closed
- 3 to raise roof at rear
- 4 to lower roof at rear

The switch is illuminated when the exterior lamps are switched on (except standing lamps).

The sliding roof can be opened or closed manually should an electrical malfunction occur (see page 90).