


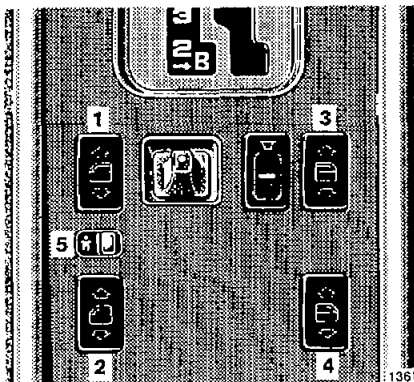


Power Windows

Switch group for power windows:

- 1 left, front
- 2 left, rear
- 3 right, front
- 4 right, rear
- 5 safety switch
- 6 individual switches (rear doors)

The power windows can be operated with the key in steering lock position 1 or 2.

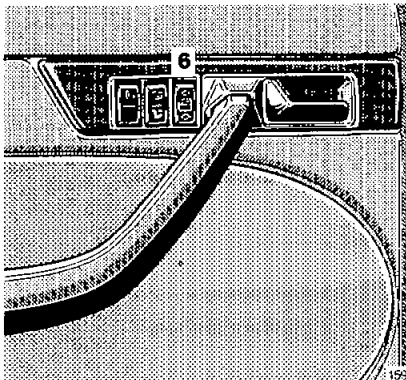

All four windows can then be operated using the switches in the center console. The rear door windows can also be operated using the switches (6) in each rear door panel.

If inadvertent operation of the rear windows (for instance by children) is to be prevented, push safety switch (5) to the right (symbol becomes visible).

Warning!

When leaving the vehicle, always remove the key from the steering lock. Do not leave children unattended in the vehicle. Unsupervised use of vehicle equipment can cause serious personal injury.

Shelf below Rear Window

Warning!

The shelf below the rear window should not be used to carry objects. This will prevent such objects from being thrown about and injuring vehicle occupants during an accident or sudden maneuver.