

On-Board Diagnostic System (California models only)

The CIS-E control unit monitors emission control components that either provide input signals to or receive output signals from the control unit. Malfunctions resulting from interruptions or failure of any of these components are indicated by the "CHECK ENGINE" indicator lamp in the instrument cluster and are simultaneously stored in the CIS-E control unit.

If the "CHECK ENGINE" indicator lamp comes on, have the system checked at your authorized MERCEDES-BENZ dealer at the first opportunity.

An on-board test connection with pushbutton and light emitting diode (LED) is located on the engine compartment firewall, allowing the accurate detection of system malfunctions.

Traveling Abroad

Abroad, there is a widely-spread MERCEDES-BENZ service network at your disposal. If you plan to travel into areas which are not listed in the index of your dealer directory, you should request pertinent information from your authorized MERCEDES-BENZ dealer.

Snow Chains

Use only snow chains that are tested and recommended by MERCEDES-BENZ. Your authorized MERCEDES-BENZ dealer will be glad to advise you on this subject.

Chains should only be used on the rear wheels. Follow to the manufacturer's mounting instructions.

After driving a short distance retighten the mounted chains.

Snow chains should only be driven on snow at speeds not to exceed 50 km/h (30 mph). Remove chains as soon as possible when driving on roads without snow.

For tips on driving on slippery winter roads refer to page 19.

Vehicles with Acceleration Slip Control (ASR):

When driving with snow chains, press the snow chain switch, see page 69.