


1477

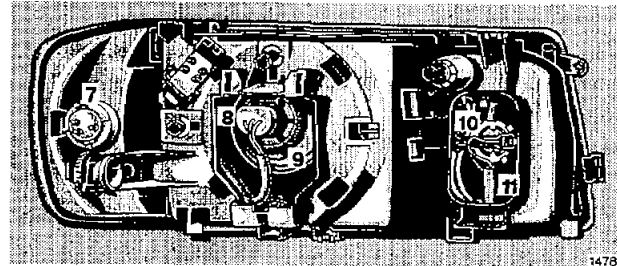

1478

### Headlamp Adjustment

Correct headlamp adjustment is extremely important. Check and readjust headlamps at regular intervals and when a bulb has been replaced.

### Replacing Bulbs

Do not touch glass portion of bulb with bare hands. Use plain paper or a clean cloth.

Install only 12 volt bulbs with the specified watt rating.

### Headlamp Assembly

- 1 Headlamp horizontal adjustment screw
- 2 Headlamp vertical adjustment screw
- 3 420 SEL, 560 SEL:  
Fog lamp adjusting screw
- 4 Plastic nut for housing of turn signal, parking, side marker and standing lamps
- 5 High and low beam headlamp cover
- 6 420 SEL, 560 SEL:  
Fog lamp cover
- 7 Turn signal, parking, side marker and standing lamp bulb

- 8 Electrical connector for high and low beam headlamp bulb
- 9 Clamping ring for high and low beam headlamp bulb
- 10 420 SEL, 560 SEL:  
Fog lamp bulb
- 11 420 SEL, 560 SEL:  
Electrical connector for fog lamp bulb

### Warning!

Halogen lamps contain pressurized gas. A bulb can explode if you:

- Touch or move it when hot.
- Drop the bulb.
- Scratch the bulb.