



Fuses

The fuse box is located in the engine compartment.

To exchange a fuse, release clamp (1) and remove fuse box cover.

All equipment protected by fuses is listed by number and letter on a label in the lid of the fuse box. The numbers and letters above the fuses correspond to the ones on the label.

Before replacing a blown fuse, determine the cause of the short circuit.

Spare fuses are furnished inside the fuse box. Observe amperage and color of fuse.

Always use a new fuse for replacement. Never attempt to repair or bridge a blown fuse.

After replacing a fuse, replace fuse box cover and secure with clamp (1).

Spark Plugs

This vehicle is equipped with spark plugs as required for driving in the USA. If additional information is desired, your authorized MERCEDES-BENZ dealer will be happy to offer advice (see also "Technical Data").

Remove and install spark plugs with a recommended spark plug wrench.

Tightening torque 25 - 30 Nm (19 - 24 ft.lb.).