


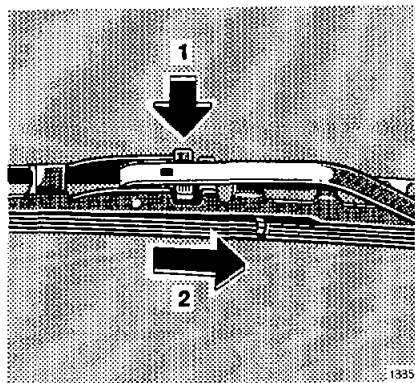

### Replacing Wiper Blades

For safety reasons, remove key from steering lock before replacing a wiper blade, otherwise the motor can suddenly turn on and cause injury.

### Windshield Wiper Blades

#### Removal:

Pull the wiper arms from their recess below the hood across the windshield until they stop (just above the hood line).

Change wiper blades one at a time while holding wiper arms to prevent the wiper arms from slipping back into their parked position recess.


Press safety tabs (1) and slide wiper blade towards the wiper arm base (2). Lift wiper arm and remove wiper blade.

#### Installation:

Lift wiper arm, insert wiper blade in arm and lock in place.

#### Note:

Do not open engine hood with wiper arm folded forward.

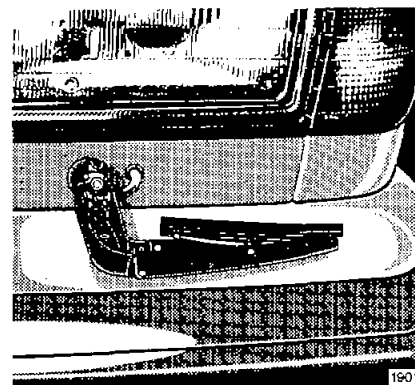

### Headlamp Wiper Blades

#### Removal:

Fold wiper arm forward. Pull wiper blade up to remove.


#### Installation:

Place wiper blade straight on wiper arm and press onto wiper arm.

## Windshield Wipers

To release frozen windshield wiper blades or to replace worn blades, the windshield wiper arms can be pulled out of their recess by hand. Sufficient force must be applied to overcome spring resistance. Be careful not to tear rubber blades which are frozen to the glass, as this will reduce the effectiveness of the wipers.

To ensure operation of the windshield wiper even when it is snowing heavily, an overload protection has been installed. It becomes effective if a certain wiping resistance is exceeded as a result of snow accumulation. The windshield wiper arm will then no longer return completely to its initial position, although the windshield wiper motor continues to run a full cycle. If this condition is encountered, the accumulated snow should be manually removed when it is safe.

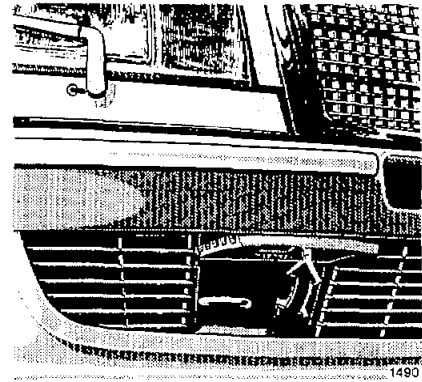

## Towing the Vehicle

The rear towing eye is located at the right, below the bumper.

The front towing eye is located on the passenger side behind a flap in the bumper panel.

Flap removal: Insert finger in recess of flap and pull flap out.

Flap installation: Engage flap at bottom and press top in securely.