

A12	Tailgate closing assist	1A
A12s1	Tailgate closing assist switch	3A
A12s2	Tailgate lock switch	4A
A12x1	Tailgate closing assist connector	1E
A12x2	Tailgate microswitch connector	3E
E17/3	Left front door entrance/exit lamp	5A
E17/4	Right front door entrance/exit lamp	6A
E17/5	Left rear door entrance/exit lamp	5M
E17/6	Right rear door entrance/exit lamp	8M
E25/1	Left C-pillar interior lamp	1M
E25/2	Right C-pillar interior lamp	9A
E25/3	Left D-pillar interior lamp	2M
E25/4	Right D-pillar interior lamp	8A
F1	Fuse and relay box	
F1-C	Fuse C, circuit 30	3L
N26	ATA control module	7M
S17/5	Left rear door switch	6M
S17/6	Right rear door switch	8M
S18/1	Rear dome lamp switch (with illumination)	9M
W8	Ground (tailgate terminal block)	
W12	Ground (center console)	
	Grounds not indicated, components are connected on engine block or bodywork	
X6/1	Terminal block (circuit 58d) (1- or 2-pole)	9H
X8	Terminal block (tailgate)	1G
X30	Accessory equipment connector block	4M
X42/3	Left rear door contact switch/dome lamp connector (ATA) (1-pole)	8H

Z7/1	Circuit 30 connector sleeve (CL)	5H
<p>Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.</p>		
<p>Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C</p>		

