

E15/3	Rear dome lamp	17M 21M
E18/1	Trunk lamp	18M 22M
F1	Fuse and relay box	
F1-A	Fuse A, circuit 15R/30	4L
F1-C	Fuse C, circuit 30	19L 23L 25L
F1-1	Fuse 1, circuit 15R	5L
F1-2	Fuse 2, circuit 15R	4L
F1-9	Fuse 9, circuit 30	4L
K24	CF relay module	2M
M12	Sliding/pop-up roof drive assembly	13M
M12k1	Sliding/pop-up roof relay	15M
M12m1	Sliding/pop-up roof motor	14M
M12s1	"Down" position microswitch	13K
M12s2	"Closed" position microswitch	13K
N42	Left SBE control module	18M
N57	CF control module (power windows, sliding/pop-up roof)	3A
S13/2	Sliding/pop-up roof switch	10M
S78/1	Rear window wiper switch Continuous wipe II Intermittent wipe	8M
S78/2	Rear window washer switch	8M
U13	Valid for coup	
U21	Valid for sedan	
U22	Valid for station wagon	

W1	Main ground (behind instrument cluster)	
W4	Ground (front dome lamp)	
W6	Ground (left wheelhousing in trunk)	
W12	Ground (center console)	
	Grounds not indicated, components are connected on engine block or bodywork	
X4/1	Terminal block (circuit 30, interior)	1H
X6/1	Terminal block (circuit 58d) (1- or 2-pole)	5H
X6/1	Terminal block (circuit 58d) (1- or 2-pole)	5H
X30	Accessory equipment connector block	6M 20M 24M 26M
X44/3	CF intermediate connector (2-pole)	2H
Y24/3	Seat backrest locking valve	16M
Z7	Circuit 87/87E connector sleeve (feed from base module LH-SFI, N16/1, overvoltage protection relay CFI and HFM-SFI, K1, K1/1, K1/2)	26H
	Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.	
	Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C	



