


124.82-12.00	Wiper and Washer System and Windshield/Headlamp Cleaning System (HCS) (except Model 124.034/.036)	As of MY 1993	Page 1 of 1
--------------	--	---------------	-------------

F1	Fuse and relay box		R2/6	Heated check valve	23G	X18	Interior/taillamp harness connector (8-pole)	21H
F1-1	Fuse 1, circuit 15R	22L	R2/7	Heated windshield washer pump hose	23H	X24	Headlamp harness connector	11H
F1-2	Fuse 2, circuit 15R	8B	S4	Combination switch	4M	X26	Interior/engine connector (12-pole)	5H 26H
F1-3	Fuse 3, circuit 58R	11L	S4s4	Windshield washer pump switch	4K	X49/2	Backup lamp/starter lock-out switch connector	14E
F1-7	Fuse 7, circuit 15	13B 26B	S4s7	Intermittent wipe	4L	Z22	Cable protectively tied back to harness	11I
F1-10	Fuse 10, circuit 30	8B	S4s8	Slow wipe	4L	 PE 07 Engine Combustion	Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.	
K2	HCS relay module	10M	S4s9	Fast wipe	4L			
M5/1	Windshield washer pump	6M	S4x1	Combination switch connector	3H	Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C		
M5/2	Headlamp washer pump	12M	S16/1	Starter lock-out/backup lamp switch	13A			
M5/3	Rear window washer pump	21M	S26/1	Heated windshield washer system thermostwitch	19A			
M6/1	Wiper motor	2M	S78/1	Rear window wiper switch I Continuous wipe II Intermittent wipe	17M			
M6/2	Left headlamp wiper motor	8M	S78/2	Rear window washer switch	19M			
M6/2x1	Left headlamp wiper motor connector	7I	U22	Valid for station wagon				
M6/3	Right headlamp wiper motor	13M	W1	Main ground (behind instrument cluster)				
M6/3x1	Right headlamp wiper motor connector	13I	W6	Ground (left wheelhousing in trunk)				
M6/4	Rear window wiper motor	20A	W7	Ground (right wheelhousing in trunk)				
M6/4x1	Rear window wiper motor connector	20D	W8	Ground (tailgate terminal block)				
N7	Exterior lamp failure monitoring module	12A	W10	Ground (battery)				
N10	Combination relay (turn/hazard signal, heated rear window, wiper motor)	5A	W12	Ground (center console)				
N13	Rear window intermittent wiper timer	17A	W14	Ground (ABS hydraulic unit bracket)				
R2/2	Left heated windshield washer nozzle	23D		Ground location without designation, component grounded directly on engine, chassis or body.				
R2/2x1	Left heated windshield washer nozzle connector	23E	X6/1	Terminal block (circuit 58d) (1- or 2-pole)	19H			
R2/3	Right heated windshield washer nozzle	24D	X8	Terminal block (tailgate)	15G			
R2/3x1	Right heated windshield washer nozzle connector	24E	X8/2	Backup lamp/rear window wiper connector (1-pole)	15H			
R2/4	Left heated washer nozzle hose	23F	X8/3	Combination switch/rear window wiper connector (1-pole)	16H			
R2/5	Right heated washer nozzle hose	24F						

