

A1	Instrument cluster	17A	F1-9	Fuse 9, circuit 30	2L 5B 24B	S18	Rear dome lamp switch	15M
A1e8	Instrument illumination	16A				S24	Fresh/recirculated air switch	21A
A1p4	Outside temperature display	16A				W1	Main ground (behind instrument cluster)	
A1r1	Instrument illumination rheostat	17A	K5	Power seat relay module (USA)	9M	W4	Ground (front dome lamp)	
A2	Radio	22A	K24	CF relay module	6M	W6	Ground (left wheelhousing in trunk)	
A2/4	Radio control module	22A	M11	Automatic antenna (radio/telephone) (USA)	8A	W12	Ground (center console)	
E10/1	Center air outlet illumination	25M	N2/4	Seat belt warning module (USA)	1M 18M		Grounds not indicated, components are connected on engine block or bodywork	
E10/2	Left air outlet illumination	23M				X6/1	Terminal block (circuit 58d) (1- or 2-pole)	7H 16I 23F
E10/3	Right air outlet illumination	7M	N7	Exterior lamp failure monitoring module	18A			
E12	Transmission selector lever position illumination	24M	N22	A/C pushbutton control module (Automatic A/C)	21A	X18	Interior/taillamp harness connector (8-pole)	1F
E13/2	Glove compartment lamp with switch	20M	N26	ATA control module	8M 17M	X30	Accessory equipment connector block	7A
E15/3	Rear dome lamp	11M				X34/10	Left front door contact switch multipoint connector	4I
E15/4	Dome/reading lamp (with seat belt reminder lamp)	1A	N40	Audio power amplifier (circuit 58D)	23A	X42/1	ATA diode holder	12F
E17/3	Left front door entrance/exit lamp	13M	N57	CF control module (power windows, sliding/pop-up roof)	10M	X42/2	Right rear door contact switch/dome lamp connector (ATA) (1-pole)	15H
E17/4	Right front door entrance/exit lamp	14M	R3	Front cigar lighter (with ashtray illumination)	19M	X42/7	Right front door contact switch connector (ATA)	6H
E17/5	Left rear door entrance/exit lamp	12M	R3e1	Illumination	18M	X42/14	ATA connector (trunk lamp)	8H
E17/6	Right rear door entrance/exit lamp	15M	R3r1	Heating element	19M	Z7	Circuit 87/87E connector sleeve (feed from base module LH-SFI, N16/1, overvoltage protection relay CFI and HFM-SFI, K1, K1/1, K1/2)	23D 10I
E18/1	Trunk lamp	9M	R3x1	Illuminated cigar lighter connector	18K	Z81	Circuit 58d connector sleeve	26F
E19/1	Left license plate lamp	9A	S1	Exterior lamp switch	19A		Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.	
E19/2	Right license plate lamp	10A	S6	Hazard flasher switch	26M			
E20	Exterior lamp switch illumination	22M	S8/2	Warning buzzer contact (exterior lamps/CL)	3M			
F1	Fuse and relay box		S14	Rear window defroster switch	26A			
F1-C	Fuse C, circuit 30	6B	S17/3	Left front door switch	5M			
F1-1	Fuse 1, circuit 15R	21L	S17/4	Right front door switch	6M			
F1-3	Fuse 3, circuit 58R	21L	S17/5	Left rear door switch	11M			
F1-5	Fuse 5, circuit 15	5B	S17/6	Right rear door switch	12M			
			S17/8	Trunk lamp switch	10M			

124.82-22.00	Interior Lighting, Model 124.034/.036	As of MY 1993	Page 2 of 2
--------------	---------------------------------------	---------------	-------------

Explanations and Notes of Wiring Diagram see  
Section 00-A  
Locations/Connections/Overview see Section 00-B/00-C



