

A1	Instrument cluster	26A	E20	Exterior lamp switch illumination	37A	N43	Right SBE control module	10M
A1e8	Instrument illumination	26A	F1	Fuse and relay box		N57	CF control module (power windows, sliding/pop-up roof)	4A 31M
A1r1	Instrument illumination rheostat	27A	F1-C	Fuse C, circuit 30	5B 15L 28L	R3	Front cigar lighter (with ashtray illumination)	28A
A2	Radio	32A	F1-1	Fuse 1, circuit 15R	32B	R3e1	Illumination	29A
A2/4	Radio control module	32A	F1-3	Fuse 3, circuit 58R	36B	R3r1	Heating element	29A
E10/1	Center air outlet illumination	23A	F1-5	Fuse 5, circuit 15	20B	R3x1	Illuminated cigar lighter connector	28C
E10/2	Left air outlet illumination	38A	F1-9	Fuse 9, circuit 30	8B 20B 36B	S1	Exterior lamp switch	34A
E10/3	Right air outlet illumination	15A	K5	Power seat relay module ^(USA)	8M 19M 25M	S6	Hazard flasher switch	24A
E13/2	Glove compartment lamp with switch	30A	K24	CF relay module	12A	S8/2	Warning buzzer contact (exterior lamps/CL)	9A 14M
E15/4	Dome/reading lamp (with seat belt reminder lamp)	17A	M11	Automatic antenna (radio/telephone) ^(USA)	6M 17M 29M	S8/2x1	Warning buzzer contact connector (exterior lamps/CL)	13K
E15/3	Rear dome lamp	5M 23M 30M	N7	Exterior lamp failure monitoring module	33A	S17/3	Left front door switch	10A
E17/3	Left front door entrance/exit lamp	3M 13M 33M	N2/4	Seat belt warning module ^(USA)	7M 9M 19M	S17/3	Left door switch	11A
E17/4	Right front door entrance/exit lamp	2M 12M 33M	N26	ATA control module	2A 16A 22M 37M	S17/4	Right front door switch	13A
E17/5	Left rear door entrance/exit lamp	4M 32M	N40	Audio power amplifier (circuit 58D)	35A	S17/4	Right door switch	14A
E17/6	Right rear door entrance/exit lamp	1M 34M	N42	Left SBE control module	18M	S17/5	Left rear door switch	5M 38M
E18/1	Trunk lamp	7M 21M 27M				S17/6	Right rear door switch	1A 38M
E19/1	Left license plate lamp	21A				S17/8	Trunk lamp switch	23A
E19/2	Right license plate lamp	22A				S17/11	Left door switch (SBE, entrance/exit lamp)	14M
						S17/12	Right door switch (SBE, entrance/exit lamp)	11M
						S18	Rear dome lamp switch	3A 24M 35M
						S68/2	Right front seat belt buckle switch (SBE)	11M

S68/2x1	Right front seat belt buckle switch connector (SBE)	11K
U13	Valid for coup	
U21	Valid for sedan	
W1	Main ground (behind instrument cluster)	
W4	Ground (front dome lamp)	
W6	Ground (left wheelhousing in trunk)	
W12	Ground (center console)	
*U97	Grounds not indicated, components are connected on engine block or bodywork	
X6/1	Terminal block (circuit 58d) (1- or 2-pole)	3E 15E 24K 36K 38E
X18	Interior/taillamp harness connector (8-pole)	9I 26I
X30	Accessory equipment connector block	6A 16M 28M
X34	Right front door contact switch intermediate connector	19K
X42/1	ATA diode holder	35G
X42/2	Right rear door contact switch/dome lamp connector (ATA) (1-pole)	35I
X42/5	Right door contact switch connector (ATA)	18I
X42/7	Right front door contact switch connector (ATA)	8I 25I

X42/14	ATA connector (trunk lamp)	2I 22K 36K
Y24/3	Seat backrest locking valve	20M
Z7	Circuit 87/87E connector sleeve (feed from base module LH-SFI, N16/1, overvoltage protection relay CFI and HFM-SFI, K1, K1/1, K1/2)	2I 6E 12I 16I 29I 34K
Z8/1	Circuit 50 connector sleeve (starter lock-out switch)	35E
Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.		
Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C		



