

124.82-25.00	Exterior Lighting with Daytime Running Lamps, Station Wagen (CDN) only	MY 1993	Page 1 of 2
--------------	--	---------	-------------

A1	Instrument cluster	11M	E4e2	Tail/parking lamp	31A	F1-8	Fuse 8, terminal 58 L	21G
A1e1	Left turn signal indicator lamp	11M	E4e3	Backup lamp	32A	F1-9	Fuse 9, terminal 30	3F
A1e2	Right turn signal indicator lamp	10M	E4e4	Stop lamp	32A	F1-13	Fuse 13, terminal 56b	17G
A1e3	High beam indicator lamp	11M	E4x1	Right taillamp unit connector	31D	F1-14	Fuse 14, terminal 56b	17G
A1e5	Generator charge indicator lamp	11M	E6/1	Left turn signal/side marker lamp (USA)	26A	F1-15	Fuse 15, terminal 56a	17G
A1e14	Exterior lamp failure indicator lamp	12M	E6/1e1	Turn signal (USA)	27A	F1-16	Fuse 16, terminal 56a	16G
A1h1	Warning buzzer	9M	E6/1e2	Right turn signal/side marker lamp (USA)	27A	K5	Power seat relay module (USA)	5M
A1h2	Audible turn signal indicator	10M	E6/2	Right turn signal/side marker lamp (USA)	25A	K24	Convenience relay module	2M
A1r1	Instrument illumination rheostat	9M	E6/2e1	Turn signal (USA)	26A	N2/4	Seat belt/keys/lights warning module (USA)	1A
A2/4	Radio control module	5M	E6/2e2	Side marker lamp (USA)	26A	N4/1	Electronic accelerator/cruise control/idle speed control module	33A
B6	Hall-effect speed sensor	37A	E10/1	Center air outlet illumination	10A	N7	Exterior lamp failure monitoring module	25M
E1	Left headlamp unit	27A	E10/3	Right air outlet illumination	7M	N10	Combination relay (turn/hazard signal, heated rear window, wiper motor)	11A
E1e1	High beam	28A	E15/2	Dome lamp (with shut-off delay and front reading lamp)	1M	N13	Rear window intermittent wiper timer	32A
E1e2	Low beam	28A	E17/3	Left front entrance/exit lamp	6M	N26	Anti-theft alarm control module	8M
E1e4	Fog lamp	28A	E17/4	Right front entrance/exit lamp	8M	N35	Daytime running lamp control module	14M
E2	Right headlamp unit	24A	E19/1	Left license plate lamp	39A	N40	Audio power amplifier (circuit 58D)	5A
E2e1	High beam	24A	E19/2	Right license plate lamp	38A	R3	Front cigar lighter (with ashtray illumination)	4M
E2e2	Low beam	25A	E21	Center high mounted stop lamp	21A	R3e1	Illumination	4M
E2e4	Fog lamp	25A	F1	Fuse and relay box		R3x1	Front cigar lighter connector	4K
E3	Left taillamp unit	29A	F1-2	Fuse 2, terminal 15R	18G	S1	Exterior lamp switch	18A
E3e1	Turn signal lamp	29A	F1-3	Fuse 3, terminal 58R	19G	S2/1	Ignition/starter switch	22A
E3e2	Tail/parking lamp	29A	F1-4	Fuse 4, terminal 58N	18G	S4	Combination switch	15A
E3e3	Backup lamp	30A	F1-5	Fuse 5, terminal 15	3F	S4s1	Turn signal switch	16B
E3e4	Stop lamp	30A			12G	S4s2	Headlamp flasher switch	17B
E3e5	Rear fog lamp	30A			37I	S4s3	Low beam switch	17C
E3x1	Left taillamp unit connector	29D	F1-6	Fuse 6, terminal 15	6F	S4x1	Combination switch connector	15D
E4	Right taillamp unit	31A	F1-7	Fuse 7, terminal 15	36I			
E4e1	Turn signal lamp	31A						

S6	Hazard flasher switch	6A
S8/2	Warning buzzer contact (exterior lamps/central locking system)	3M
S9/1	Stop lamp switch (4-pole)	37A
S16/1	Starter lock-out/backup lamp switch	35A
S17/3	Left front door switch	3M
S17/4	Right front door switch	7M
W1	Main ground (behind instrument cluster)	
W6	Ground (left wheelhousing in trunk)	
W7	Ground (right wheelhousing in trunk)	
W8	Ground (tailgate terminal block)	
W10	Ground (battery)	
W14	Ground (ABS hydraulic unit bracket)	
	Grounds not indicated, components are connected on engine block or bodywork	
X4/1	Terminal block (terminal 30, interior)	3D 23E 18F 15H
X4/10	Terminal block (terminal 30/terminal 61 battery) (3-pole)	23G
X6/1	Terminal block (terminal 58D) (1-or 2-pole)	5D
X8	Terminal block (tailgate)	32D 38F 21G
X8/2	Backup lamp/rear window wiper connector (1-pole)	32E

X18	Interior/taillamp harness connector (8-pole)	30F 21H 26H
X24	Headlamp harness connector (6-pole)	26F
X34	Right front door contact switch connector	5H
X42/7	Right front door contact switch connector (ATA)	7I
X49/2	Backup lamp/starter lock-out switch connector	35E
X49/3	Backup lamp switch signal connector (ASR/electronic 33D accelerator) (1-pole)	
Z81	Terminal 58d connector sleeve	6D 9I
	Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be Shown framed.	
	Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C	





