

124.82-26.00	Exterior Lighting, Sedan (Engine 104 HFM-SFI) (except (CDN) )	As of M.Y.1993	Page 1 of 2
--------------	---	----------------	-------------

A1	Instrument cluster	12M	E4e3	Backup lamp	32A	F1-5	Fuse 5, terminal 15	14G 36H
A1e1	Left turn signal indicator lamp	12M	E4e4	Stop lamp	33A	F1-6	Fuse 6, terminal 15	2G 13G
A1e2	Right turn signal indicator lamp	11M	E4e6	Side marker lamp	33A	F1-7	Fuse 7, terminal 15	35H
A1e3	High beam indicator lamp	12M	E6/1	Left turn signal/side marker lamp (USA)	27A	F1-8	Fuse 8, terminal 58 L	23G
A1e5	Generator charge indicator lamp	13M	E6/1e1	Turn signal (USA)	28A	F1-9	Fuse 9, terminal 30	2G
A1e14	Exterior lamp failure indicator lamp	14M	E6/1e2	Side marker lamp (USA)	28A	F1-13	Fuse 13, terminal 56b	19G
A1h2	Audible turn signal indicator	12M	E6/2	Right turn signal/side marker lamp (USA)	26A	F1-14	Fuse 14, terminal 56b	19G
A1r1	Instrument illumination rheostat	11M	E6/2e1	Turn signal (USA)	27A	F1-15	Fuse 15, terminal 56a	19G
A2/4	Radio control module	2M	E6/2e2	Side marker lamp (USA)	27A	F1-16	Fuse 16, terminal 56a	18G
B6	Hall-effect speed sensor	34A	E10/1	Center air outlet illumination	4A	K5	Power seat relay module (USA)	2M
E1	Left headlamp unit	28A	E10/3	Right air outlet illumination	3M	K24	Convenience relay module	8A
E1e1	High beam	29A	E15/2	Dome lamp (with shut-off delay and front reading lamp)	9A	M11	Automatic antenna (radio/telephone) (USA)	8M
E1e2	Low beam	29A	E15/3	Rear dome lamp	6M	N2/4	Seat belt/keys/lights warning module (USA)	6A
E1e4	Fog lamp	28A	E17/3	Left front entrance/exit lamp	9A	N4/1	Electronic accelerator/cruise control/idle speed control module	35A
E2	Right headlamp unit	25A	E17/4	Right front entrance/exit lamp	5M	N7	Exterior lamp failure monitoring module	27M
E2e1	High beam	25A	E17/5	Left rear entrance/exit lamp	10A	N10	Combination relay (turn/hazard signal, heated rear window, wiper motor)	15A
E2e2	Low beam	25A	E17/6	Right rear entrance/exit lamp	6M	N26	Anti-theft alarm control module	4M 10M
E2e4	Fog lamp	26A	E18/1	Trunk lamp	8M	N35	Daytime running lamp control module	14M
E3	Left taillamp unit	30A	E19/1	Left license plate lamp	39A	N40	Audio power amplifier (circuit 58D)	1A
E3e1	Turn signal lamp	30A	E19/2	Right license plate lamp	39A	N57	Convenience control module (power windows, sliding/pop-up roof)	7M
E3e2	Tail/parking lamp	30A	E21	Center high mounted stop lamp	34A	R3	Front cigar lighter (with ashtray illumination)	1M
E3e3	Backup lamp	31A	F1	Fuse and relay box				
E3e4	Stop lamp	31A	F1-C	Fuse C, terminal 30	7G			
E3e5	Rear fog lamp	30A	F1-2	Fuse 2, terminal 15R	20G			
E3e6	Left hand side marker lamp	31A	F1-3	Fuse 3, terminal 58R	21G			
E4	Right taillamp unit	32A	F1-4	Fuse 4, terminal 58N	20G			
E4e1	Turn signal lamp	32A						
E4e2	Tail/parking lamp	32A						

R3e1	Illumination	1M
R3x1	Front cigar lighter connector	1K
S1	Exterior lamp switch	20A
S2/1	Ignition/starter switch	23A
S4	Combination switch	17A
S4s1	Turn signal switch	18B
S4s2	Headlamp flasher switch	19B
S4s3	Low beam switch	19C
S4x1	Combination switch connector	17D
S6	Hazard flasher switch	2A
S8/2	Warning buzzer contact (exterior lamps/central locking system)	5A
S9/1	Stop lamp switch (4-pole)	37A
S16/1	Starter lock-out/backup lamp switch	36A
S17/3	Left front door switch	7A
S17/4	Right front door switch	3M
S17/5	Left rear door switch	14A
S17/6	Right rear door switch	14A
S17/8	Trunk lamp switch	9M
S18	Rear dome lamp switch	11A
W1	Main ground (behind instrument cluster)	
W6	Ground (left wheelhousing in trunk)	
W7	Ground (right wheelhousing in trunk)	
W10	Ground (battery)	
W12	Ground (center console)	
W14	Ground (ABS hydraulic unit bracket)	

Grounds not indicated, components are connected on engine block or bodywork		
X4/1	Terminal block (terminal 30, interior)	1H 16H 20F 24F
X4/10	Terminal block (terminal 30/terminal 61 battery) (3-pole)	24H
X6/1	Terminal block (terminal 58D) (1-or 2-pole)	1F 11E
X18	Interior/taillamp harness connector (8-pole)	8E 27H 33H
X24	Headlamp harness connector (6-pole)	27F
X30	Accessory equipment connector block	9G
X42/1	Anti-theft alarm diode holder	13A
X42/2	Right rear door contact switch/dome lamp connector (ATA) (1-pole)	12E
X42/7	Right front door contact switch connector (ATA)	4I
X42/14	Anti-theft alarm connector (trunk lamp)	10I
X49/2	Backup lamp/starter lock-out switch connector	36E
X49/3	Backup lamp switch signal connector (ASR/electronic 35D accelerator) (1-pole)	
Z7/16	Terminal 30 connector sleeve (accessory equipment connector block)	5I 9E
Z81	Terminal 58d connector sleeve	3E 10I

<p>Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be Shown framed.</p>
<p>Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C</p>





