



F1	Fuse and relay box	
F1-C	Fuse C, circuit 30	15L
F1-1	Fuse 1, circuit 15R	15L
M6/4	Rear window wiper motor	21M
M6/4x1	Rear window wiper motor connector	21K
M11	Automatic antenna (radio/telephone) (USA)	17M
M14/1	Supply pump (CL)	13M
M14/1x1	Supply pump voltage supply connector (CL)	13K
M14/2x2	Supply pump control line connector (CL)	12K
M14/2	Supply pump (CL/OSB)	13M
M14/2x1	Supply pump voltage supply connector (CL/OSB)	13K
M14/2x2	Supply pump control line connector (CL/OSB)	12K
N13	Rear window intermittent wiper timer	22M
N26	ATA control module	7M 10M 33M
N43	Right SBE control module	20M
N57	CF control module (power windows, sliding/pop-up roof)	8A
S8/2	Warning buzzer contact (exterior lamps/CL)	25M
S8/2x1	Warning buzzer contact connector (exterior lamps/CL)	24K
S47	Left front door actuator	23M
S48	Right front door actuator	25M
S49	Trunk lid lock actuator	19M
S50	Outside/inside mirror control switch	27M
S62/1	Left front door switch (ATA)	2M 5M

S62/1x1	Left front door switch connector (ATA)	2K 5K
S62/2	Right front door switch (ATA)	1M 6M
S62/2x1	Right front door switch connector (ATA)	1K 6K
S62/3	Trunk lid switch (ATA/CF)	3M
S62/3x1	Trunk lid switch connector (ATA)	3K
S62/11	Rear seat cushion switch (ATA)	9M
S88/2	Trunk lid lock switch (CF)	8M
S88/2x1	Trunk lid lock switch connector (CF)	8K
U22	Valid for station wagon	
U23	Valid for cabriolet	
U37	Valid for orthopedic backrest (OSB)	
W1	Main ground (behind instrument cluster)	
W7	Ground (right wheelhousing in trunk)	
W12	Ground (center console)	
	Grounds not indicated, components are connected on engine block or bodywork	
X8	Terminal block (tailgate)	21H
X30	Accessory equipment connector block	16M
X42/11	Tailgate harness connector (3-pole)	3H
X43	ATA connector (CL system) (3-pole)	21E
Z7	Circuit 87/87E connector sleeve (feed from base module LH-SFI, N16/1, overvoltage protection relay CFI and HFM-SFI, K1, K1/1, K1/2)	16H 19H 23H 25H
Z24/1	Connector sleeve (ATA arm)	2F
Z24/2	Connector sleeve (ATA disarm)	3F

<p>Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.</p>
<p>Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C</p>

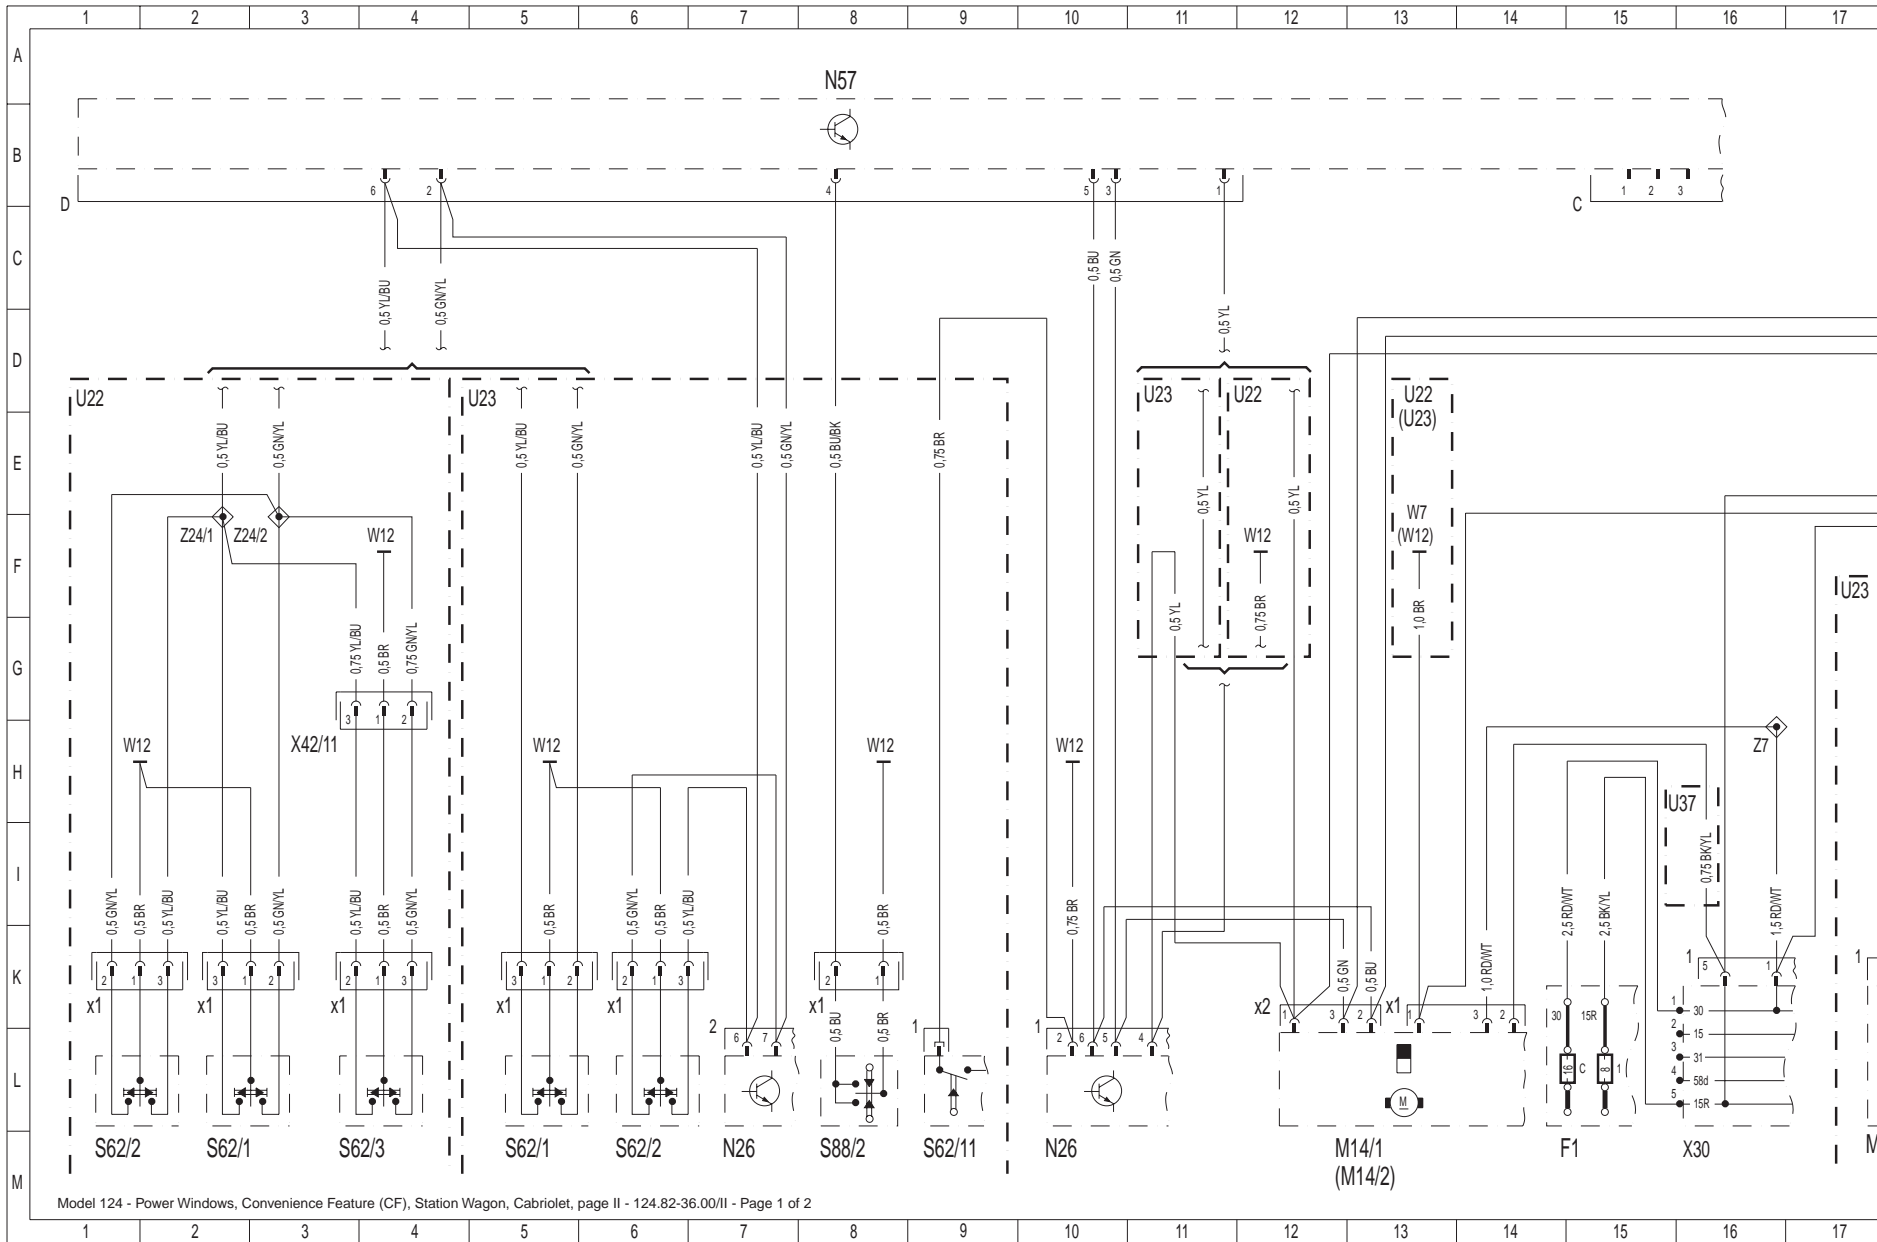

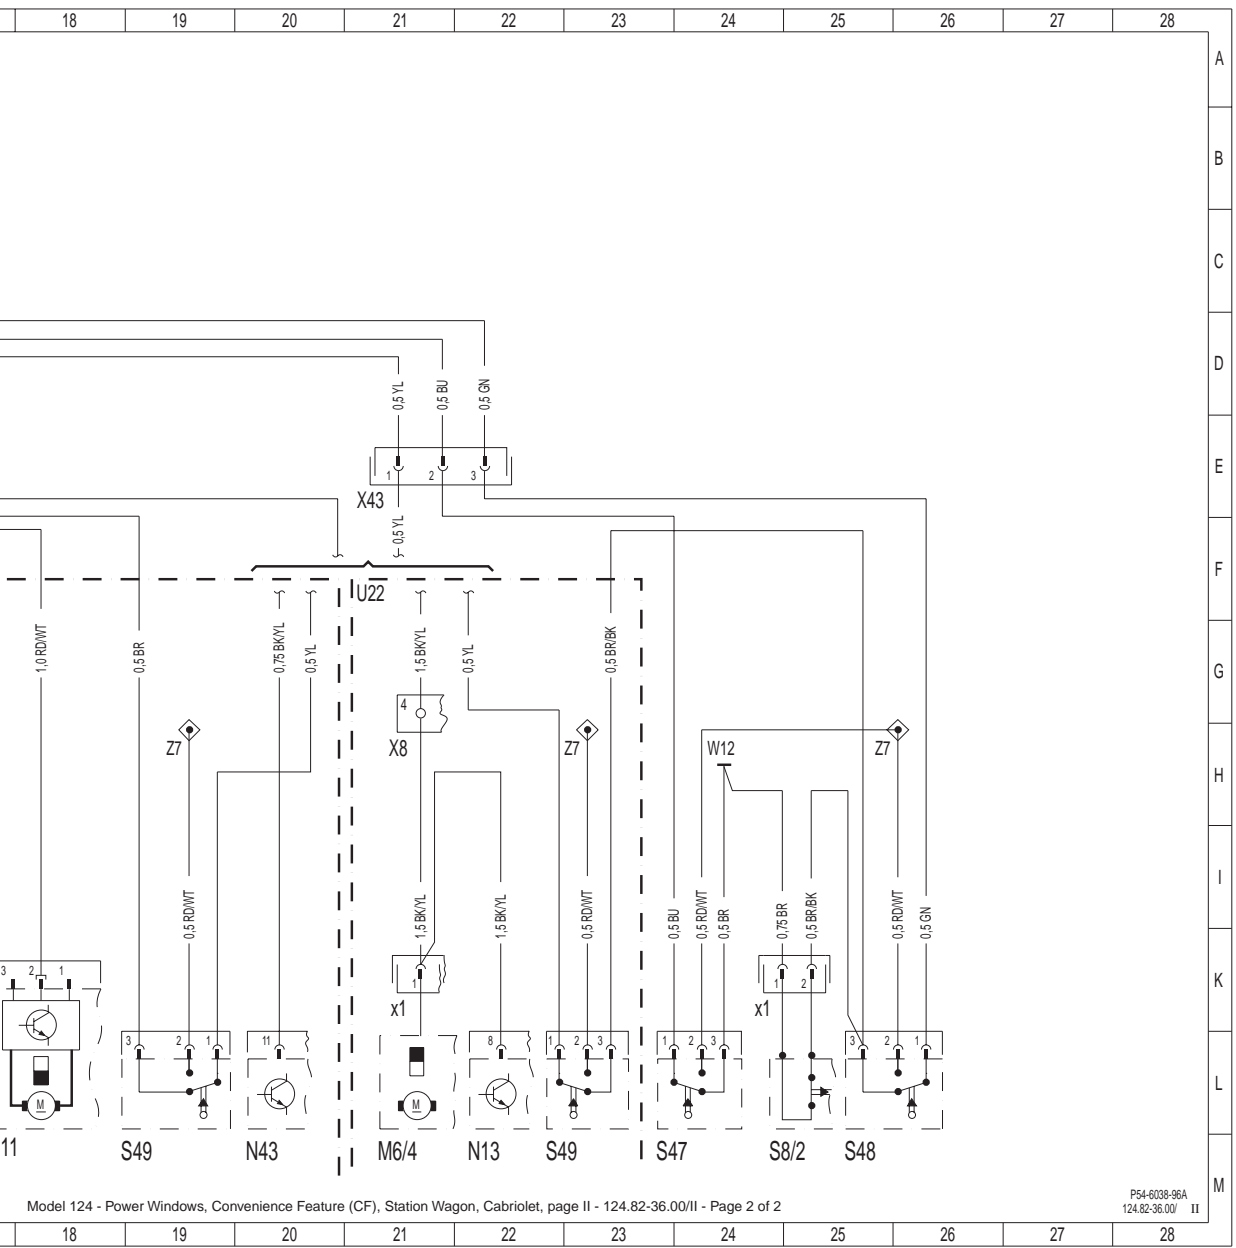

P54-6038-96A  
124.82-36.00/ II

A  
B  
C  
D  
E  
F  
G  
H  
I  
K  
L  
M