

A1	Instrument cluster	2M	F1-15	Fuse 15, circuit 56a	8H	<table border="1" style="width:100%; border-collapse: collapse;"> <tr> <td style="width:10%;">X4/10</td> <td style="width:50%;">Terminal block (circuit 30/circuit 61 battery) (3-pole)</td> <td style="width:40%;">6H 9F 14H</td> </tr> <tr> <td>X24</td> <td>Headlamp harness connector</td> <td>6E</td> </tr> <tr> <td>Z22</td> <td>Cable protectively tied back to harness</td> <td>10F</td> </tr> <tr> <td colspan="3" style="text-align: center;"> <p>Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.</p> </td> </tr> <tr> <td colspan="3" style="text-align: center;"> <p>Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C</p> </td> </tr> </table>	X4/10	Terminal block (circuit 30/circuit 61 battery) (3-pole)	6H 9F 14H	X24	Headlamp harness connector	6E	Z22	Cable protectively tied back to harness	10F	<p>Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.</p>			<p>Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C</p>		
X4/10	Terminal block (circuit 30/circuit 61 battery) (3-pole)	6H 9F 14H																			
X24	Headlamp harness connector	6E																			
Z22	Cable protectively tied back to harness	10F																			
<p>Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.</p>																					
<p>Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C</p>																					
A1e5	Generator charge indicator lamp	2M	F1-16	Fuse 16, circuit 56a	8H																
E1	Left headlamp unit	16A	K2	HCS relay module	3A																
E1e1	High beam	16A	M6/2	Left headlamp wiper motor	2A																
E1e2	Low beam	16A	M6/2x1	Left headlamp wiper motor connector	2D																
E2	Right headlamp unit	15A	M6/3	Right headlamp wiper motor	4A																
E2e1	High beam	15A	M6/3x1	Right headlamp wiper motor connector	4D																
E2e2	Low beam	15A	N35	Daytime running lamp control module	4M																
E3	Left taillamp unit	17A	S1	Exterior lamp switch	10A																
E3e2	Tail/parking lamp	17A	S2/1	Ignition/starter switch	13A																
E4	Right taillamp unit	18A	S2/2	Glow/starter switch	13A																
E4e2	Tail/parking lamp	18A	S4	Combination switch	8A																
E19/1	Left license plate lamp	22A	S4s1	Turn signal switch	7B																
E19/2	Right license plate lamp	21A	S4s2	Headlamp flasher switch	8B																
E21	Center high mounted stop lamp	20A	S4s3	Low beam switch	8C																
F1	Fuse and relay box		S4x1	Combination switch connector	7D																
F1-2	Fuse 2, circuit 15R	9H	S17/8	Trunk lamp switch	20A																
F1-3	Fuse 3, circuit 58R	6B 10H	U23	Valid for cabriolet																	
F1-4	Fuse 4, circuit 58N	9H	W1	Main ground (behind instrument cluster)																	
F1-5	Fuse 5, circuit 15	1L 13G 36H	W6	Ground (left wheelhousing in trunk)																	
F1-7	Fuse 7, circuit 15	1L 35H	W7	Ground (right wheelhousing in trunk)																	
F1-8	Fuse 8, circuit 58L	12H	W10	Ground (battery)																	
F1-13	Fuse 13, circuit 56b	9H	W14	Ground (ABS hydraulic unit bracket)																	
F1-14	Fuse 14, circuit 56b	8H		Grounds not indicated, components are connected on engine block or bodywork																	
			X4/1	Terminal block (circuit 30, interior)	5H 14F																



