

A10	Left SBE	1M
A10m1	SBE motor	1M
A10s1	Extender arm "retracted" switch	2M
A10s2	Extender arm "extended" switch	2M
A10s3	Force limit switch	3M
A10s4	Retract movement switch	3M
A11	Right SBE	30M
A11m1	SBE motor	30M
A11s1	Extender arm "retracted" switch	30M
A11s2	Extender arm "extended" switch	29M
A11s3	Force limit switch	29M
A11s4	Retract movement switch	28M
E10/3	Right air outlet illumination	12M
E15/4	Dome/reading lamp (with seat belt reminder lamp)	10M
E15/3	Rear dome lamp	17M
E17/3	Left front door entrance/exit lamp	22M
E17/4	Right front door entrance/exit lamp	26M
E18/1	Trunk lamp	15M
E19/1	Left license plate lamp	16M
E19/2	Right license plate lamp	17M
F1	Fuse and relay box	
F1-B	Fuse B, circuit 15	23L
F1-C	Fuse C, circuit 30	23L
F1-5	Fuse 5, circuit 15	9L
K5	Power seat relay module (USA)	10M
K18/1	Seat belt warning relay module	4M
K24	CF relay module	6M
M11	Automatic antenna (radio/telephone) (USA)	18M

N2/4	Seat belt warning module (USA)	8M
N26	ATA control module	13M
N42	Left SBE control module	13A
N43	Right SBE control module	28A
S8/2	Warning buzzer contact (exterior lamps/CL)	21M
S8/2x1	Warning buzzer contact connector (exterior lamps/CL)	21K
S17/3	Left door switch	6M
S17/4	Right door switch	13M
S17/8	Trunk lamp switch	15M
S17/11	Left door switch (SBE, entrance/exit lamp)	20M
S17/12	Right door switch (SBE, entrance/exit lamp)	27M
S18	Rear dome lamp switch	18M
S68/1	Left front seat belt buckle switch (SBE/reminder)	19M
S68/1x1	Left front seat belt buckle switch connector (SBE/reminder)	19K
S68/2	Right front seat belt buckle switch (SBE)	27M
S68/2x1	Right front seat belt buckle switch connector (SBE)	27K
W1	Main ground (behind instrument cluster)	
W6	Ground (left wheelhousing in trunk)	
W12	Ground (center console)	
	Grounds not indicated, components are connected on engine block or bodywork	
X6/1	Terminal block (circuit 58d) (1- or 2-pole)	19I
X28/6	Seat belt warning module/relay module connector	4G
X30	Accessory equipment connector block	24M
X34	Right front door contact switch intermediate connector	12E

X42/5	Right door contact switch connector (ATA)	12G
Y24/3	Seat backrest locking valve	11M
Z7/1	Circuit 30 connector sleeve	22I 26I
Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.		
Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C		



