

F1	Fuse and relay box
F1-5	Fuse 5, terminal 15 2L
N2/4	Seat belt/keys/lights warning module (USA) 2A
S68/1	Left front seat belt buckle switch (seat belt reminder) 4M
S68/1x1	Left front seat belt buckle switch connector (seat belt extender/reminder) 4K
Grounds not indicated, components are connected on engine block or bodywork	
Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be Shown framed.	
Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C	

