
ENGINE 601 in MODEL 124, 201, 202 ENGINE 602 in MODEL 124, 201 ENGINE 603 in MODEL 124, 126, 140

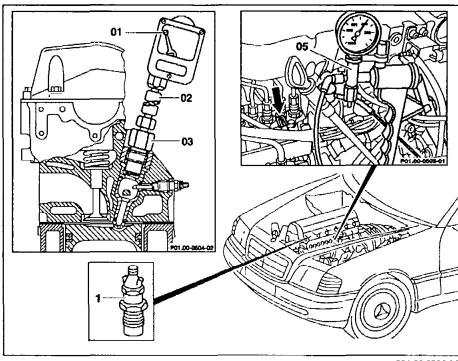


P01.00-0506-06


XX	Removing, installing		
1	Warm engine up to operating temperature	Test compression pressure only when engine at operating temperature	
2	Remove injection nozzles (1)	Naturally aspirated engine	07.1-230
		Turbo engine	07.1-6810
3.1	Remove windshield washer fluid reservoir	Model 202	
4	Connect vacuum pump (05) to stop unit and pressurize with about 400 mbar	i This prevents fuel being injected.	001 589 73 21 00
5	Crank engine several times with ignition/starter switch for cleaning; the transmission should be in neutral for this step.		
6	Screw compression recorder (01) with the appropriate connector (03) and flexible connection piece (02) into the prechamber of the cylinder to be tested	SUse connector on engines with oblique injection.	602 589 00 63 00
		<b>3</b>	124 589 36 63 00
		<b>3</b>	001 589 76 21 00
7	Test compression pressure; crank engine at least 9 revolutions with ignition/starter switch for this step with transmission in neutral and vacuum pump connected.	Test compression pressure of the remaining cylinders in the same way.	BE01.00-P-1001-01A
			BE01.00-P-1002-01A

	8	Compare pressures measured with the	1 If the pressure is below the minimum	BE01.00-P-1003-01A
1		specified test data.	compression pressure at one or several	
			cylinders, determine cause; test cylinders	
١			for leaks if necessary.	
			Testing cylinder leaktightness	01-015


## Compression pressure

Number	Designation		Engine 601, 602 except 602.98, 603 with compression recorder 001 589 47 21 00	Engine 601, 602 except 602.98, 603 with compression recorder 001 589 78 21 00
BE01.00-P-1001-01A	Compression pressure installation tolerance or value when new	bar	26–32	29-35
BE01.00-P-1002-01A	Compression pressure wear limit or limit value	bar	~18	≈ 18
BE01.00-P-1003-01A	Compression pressure permissible difference between individual cylinders	bar	≤3	≤3

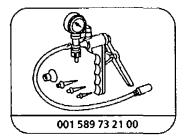

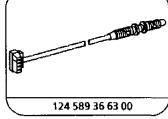



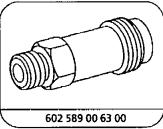

Manually operated vacuum pump

Adapter cable

Compression recorder

Connector